Mamiya

PARTS CATALOG

FOR

Mamiya RB 67 PRO S

Camera Body

Roll Film Holder

Mamiya
CAMERA CO., LTD.
TOKYO, JAPAN

April 1975

EXPLODED VIEWS

mamiya RB67 PROS

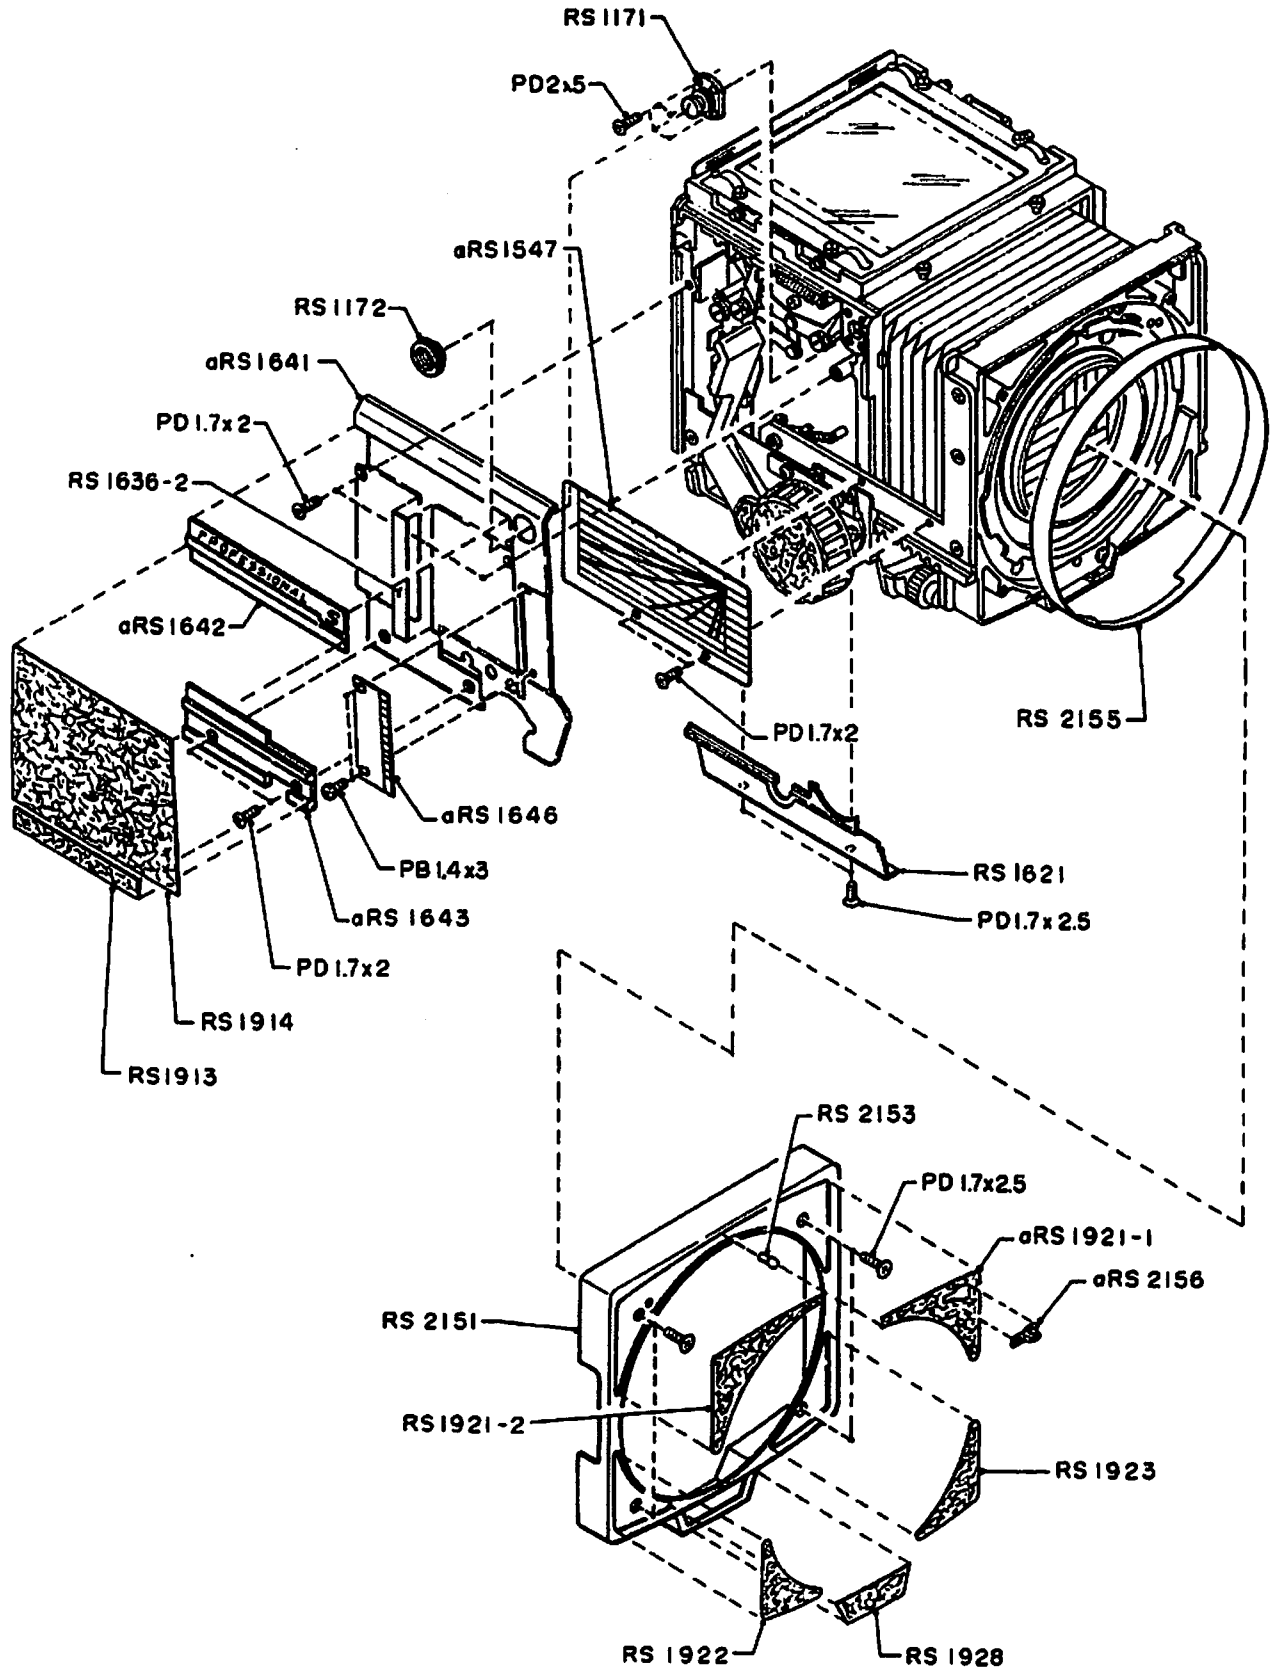

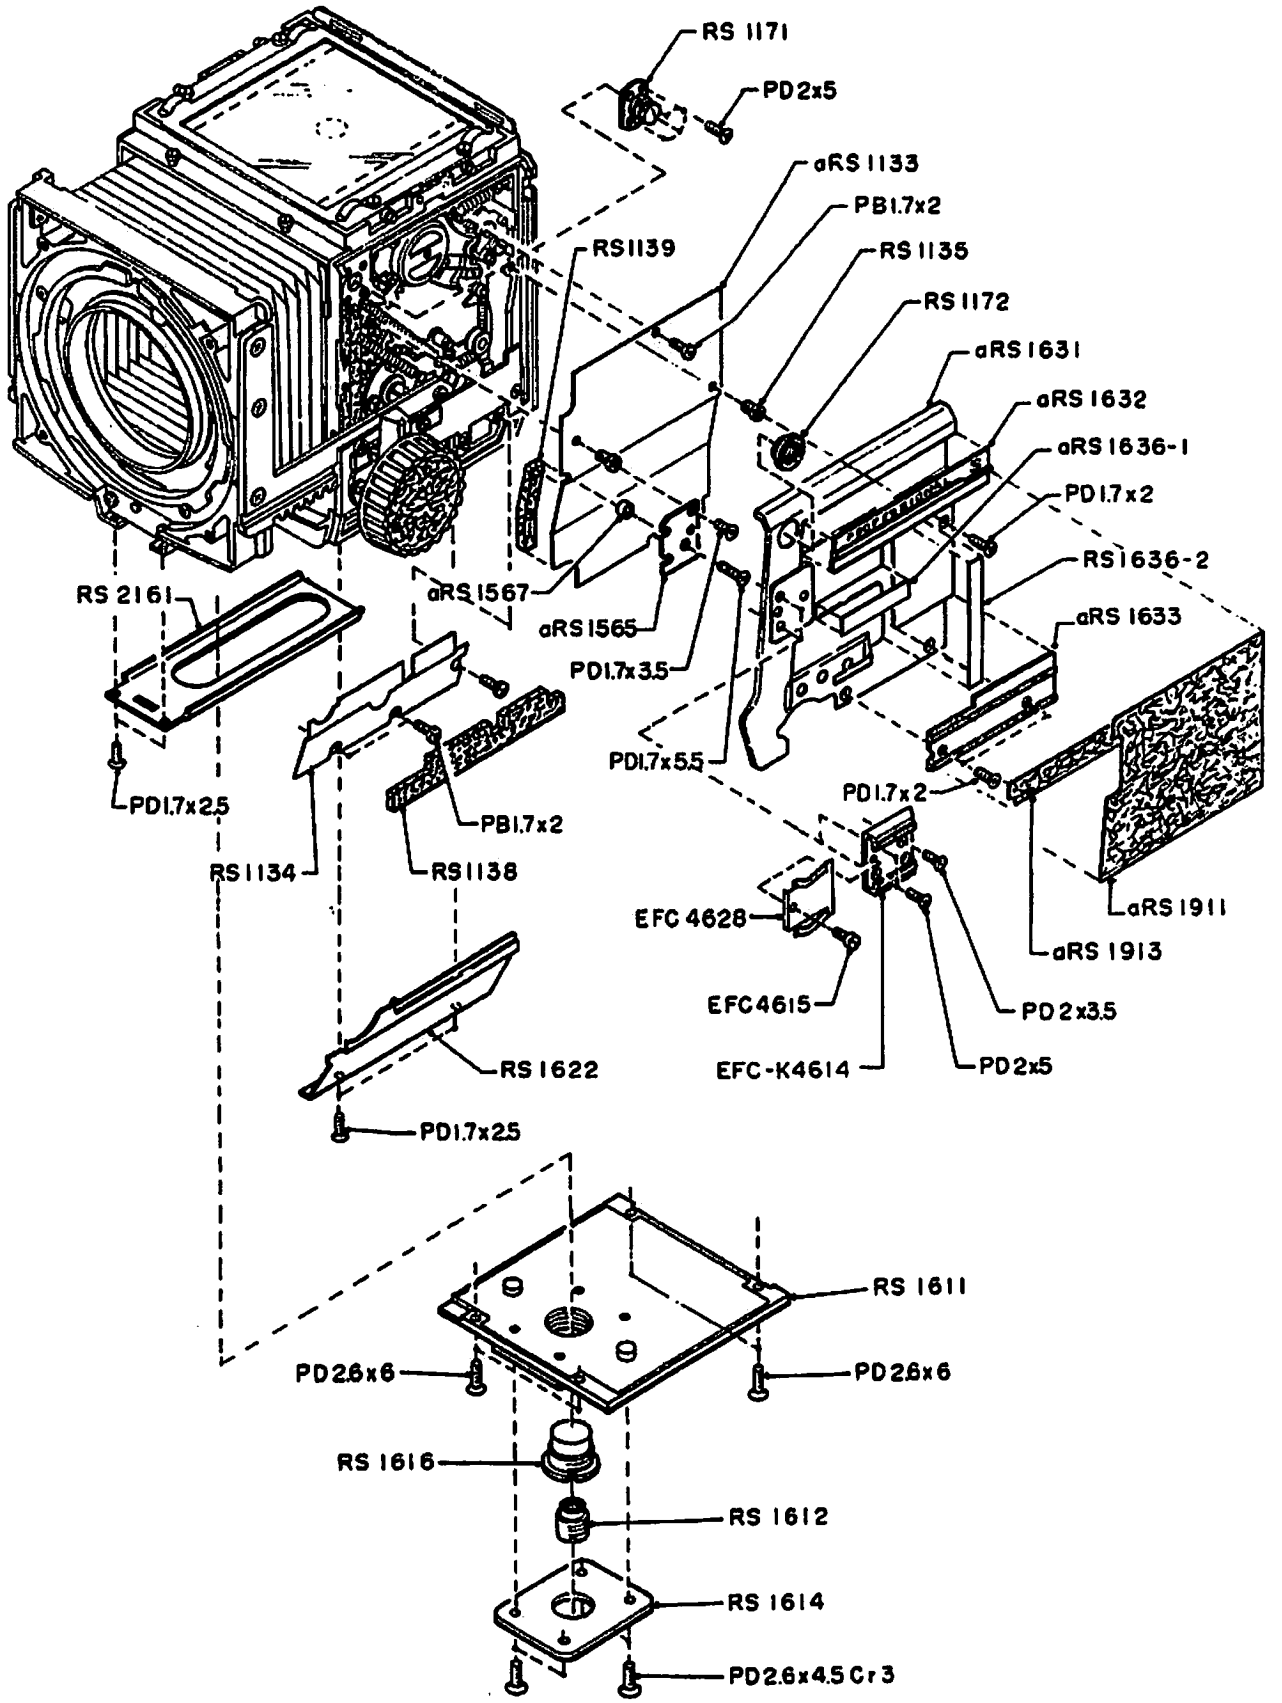
RS 1171
PD2x5
aRS 1133
PB1.7x2
RS1139
RS 1135
RS 1172
aRS 1631
aRS 1632
aRS 1636-1
PD1.7x2
RS1636-2
aRS 1633
RS 2161
aRS1567
aRS1565
PD1.7x3.5
PD1.7x5.5
PD1.7x2.5
PB1.7x2
RS1134
RS1138
PD1.7x2
aRS 1911
EFC 4628
aRS 1913
EFC4615
PD2x3.5
EFC-K4614
PD2x5
RS 1622
PD1.7x25
RS 1611
PD2.6x6
PD2.6x6
RS 1616
RS 1612
RS 1614
PD2.6x4.5 Cr3

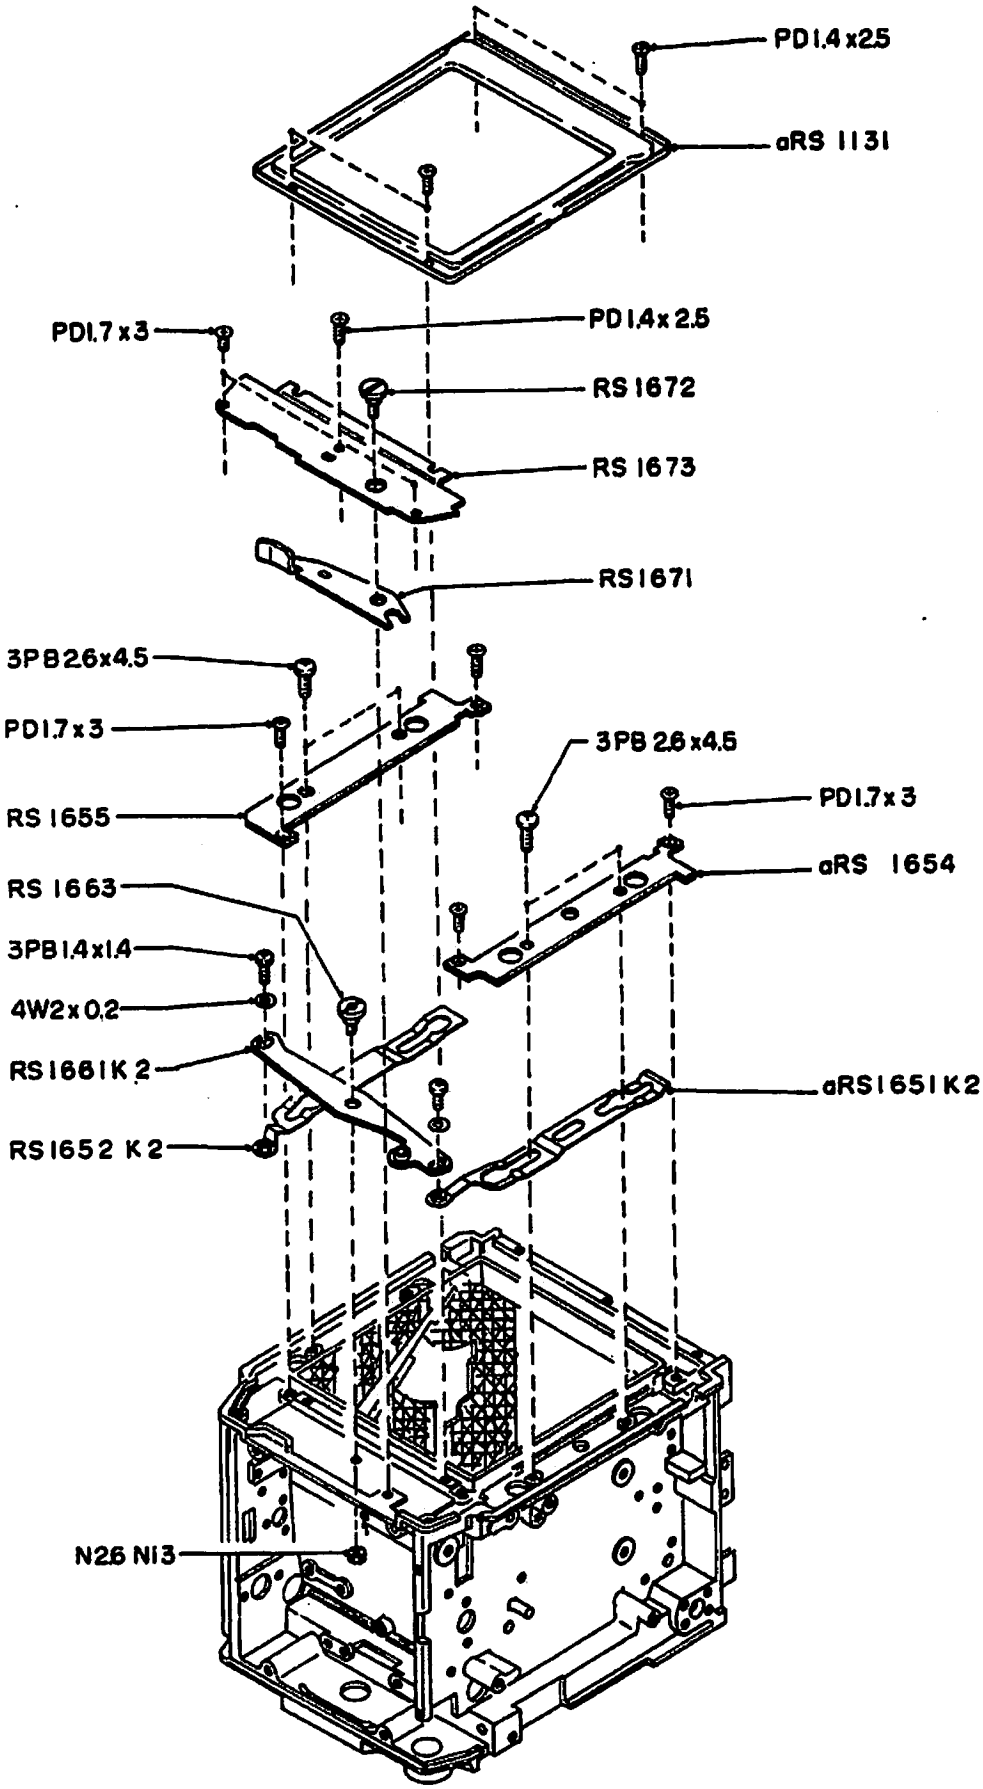
PD1.4x2.5
aRS 1131
PD1.7x3
PD1.4x2.5
RS 1672
RS 1673
RS1671
3PB2.6x4.5
PD1.7x3
3PB 2.6x4.5
PD1.7x3
RS 1655
aRS 1654
RS 1663
3PB1.4x1.4
4W2x0.2
RS1661K2
aRS1651K2
RS1652 K2
N26 N13

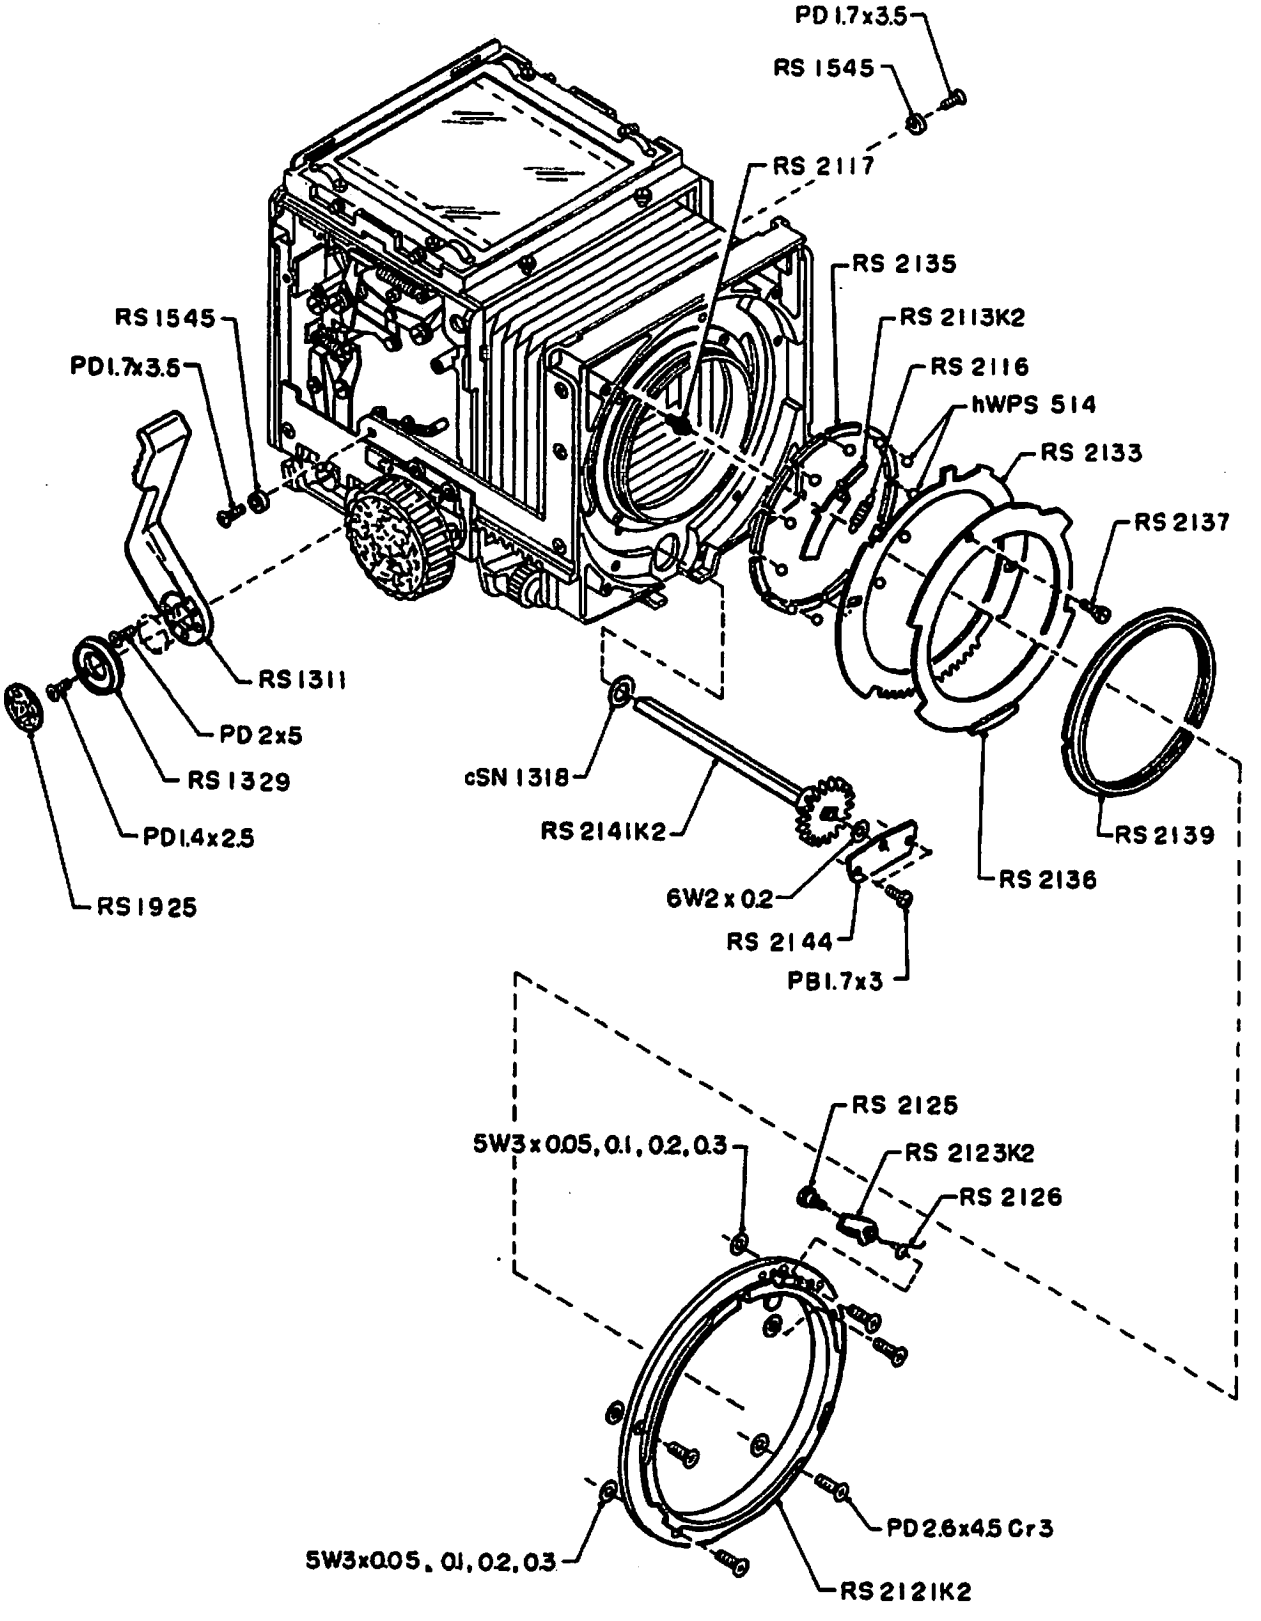
PD 1.7x3.5
RS 1545
RS 2117
RS 2135
RS 2113K2
RS 2116
hWPS 514
RS 2133
RS 2137
RS 1545
PD1.7x3.5
RS 1311
PD 2x5
RS 1329
PD1.4x2.5
RS 1925
cSN 1318
RS 2141K2
6W2 x 0.2
RS 2144
PB1.7x3
RS 2139
RS 2136
RS 2125
5W3x0.05, 0.1, 0.2, 0.3
RS 2123K2
RS 2126
PD 2.6x4.5 Cr3
5W3x0.05, 0.1, 0.2, 0.3
RS 2121K2

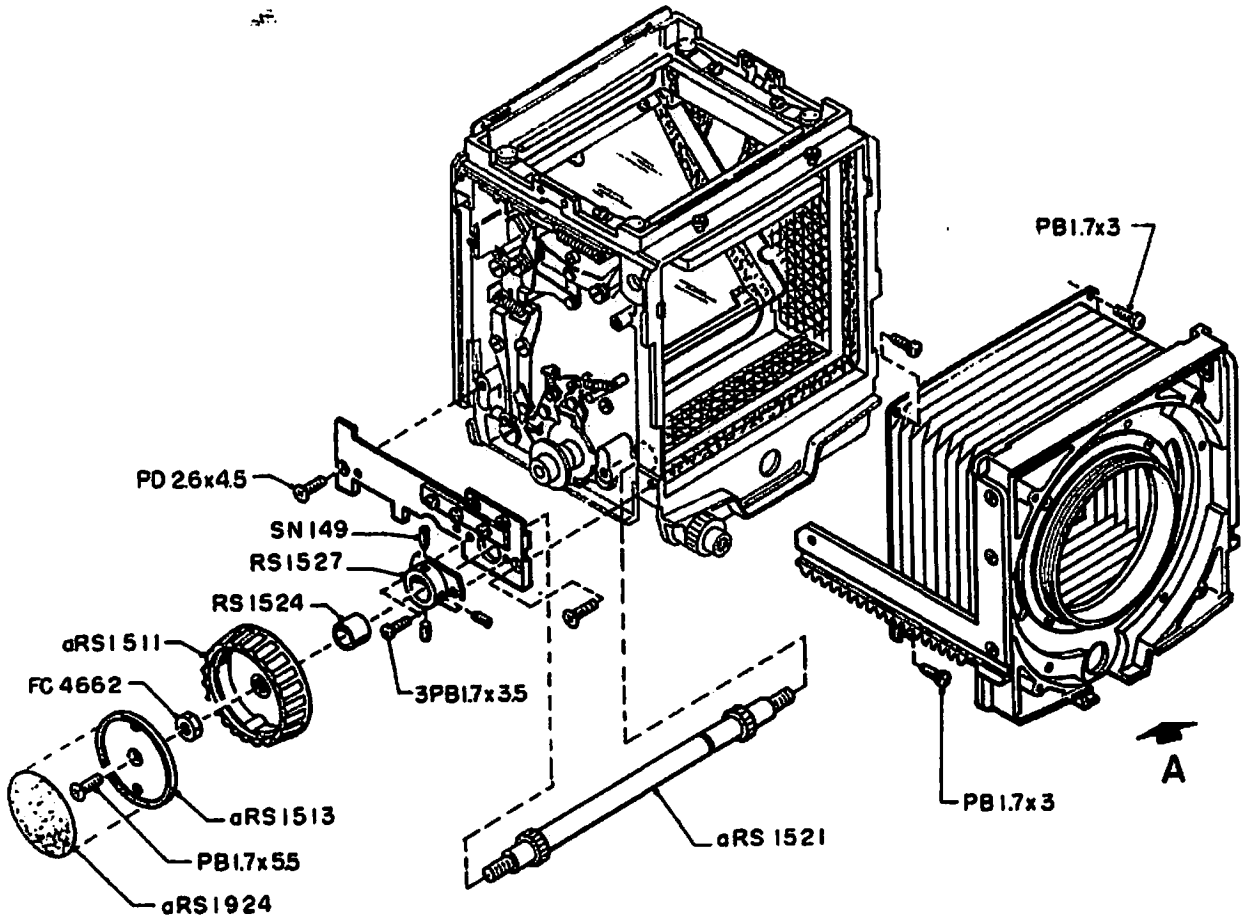
PB1.7x3
PD 2.6x4.5
SN149
RS1527
RS1524
aRS1511
FC 4662
3PB1.7x3.5
aRS1513
PB1.7x55
aRS1924
aRS 1521
PB1.7x3
A

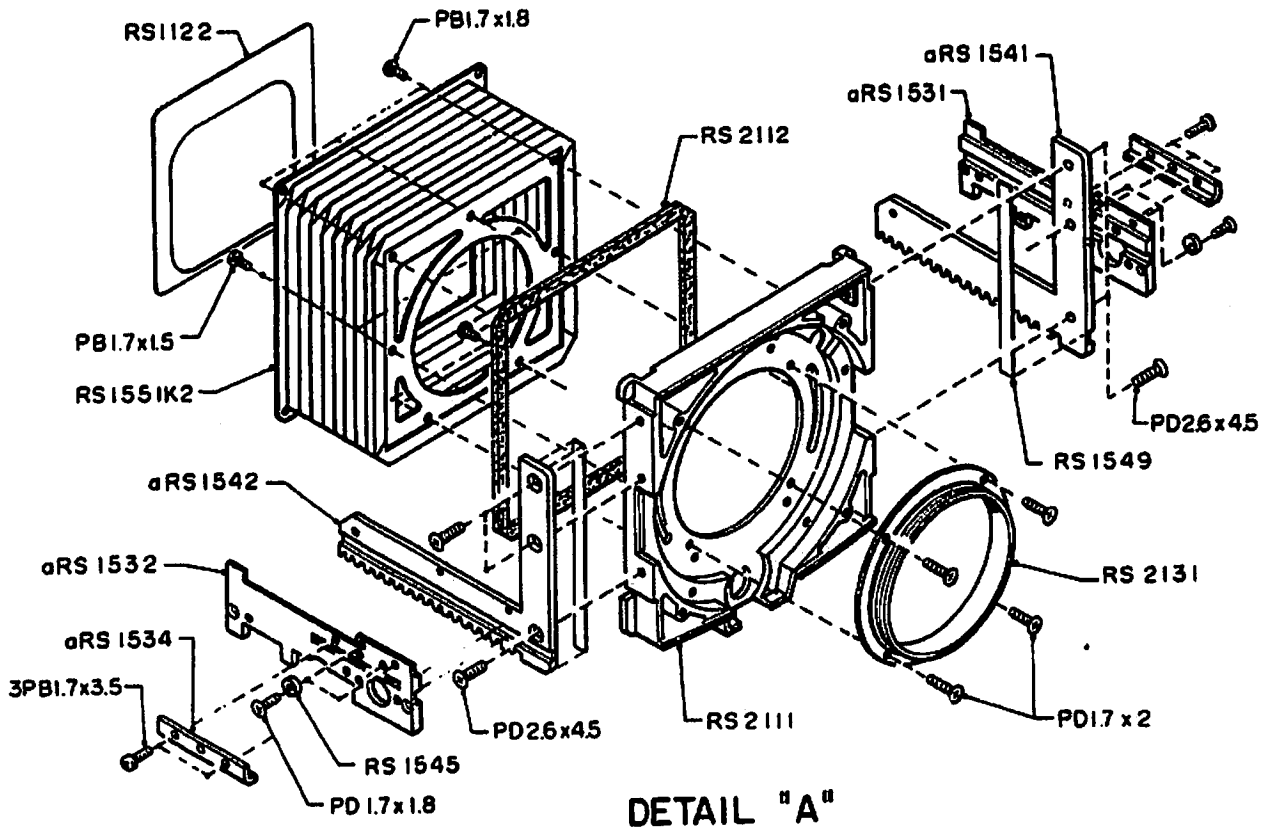
RS1122
PB1.7x1.8
aRS 1541
aRS1531
RS 2112
PB1.7x1.5
RS1551K2
PD2.6x4.5
RS 1549
aRS1542
aRS 1532
RS 2131
aRS 1534
3PB1.7x3.5
PD2.6x4.5
RS 2111
PD1.7 x 2
RS 1545
PD 1.7x1.8

DETAIL "A"

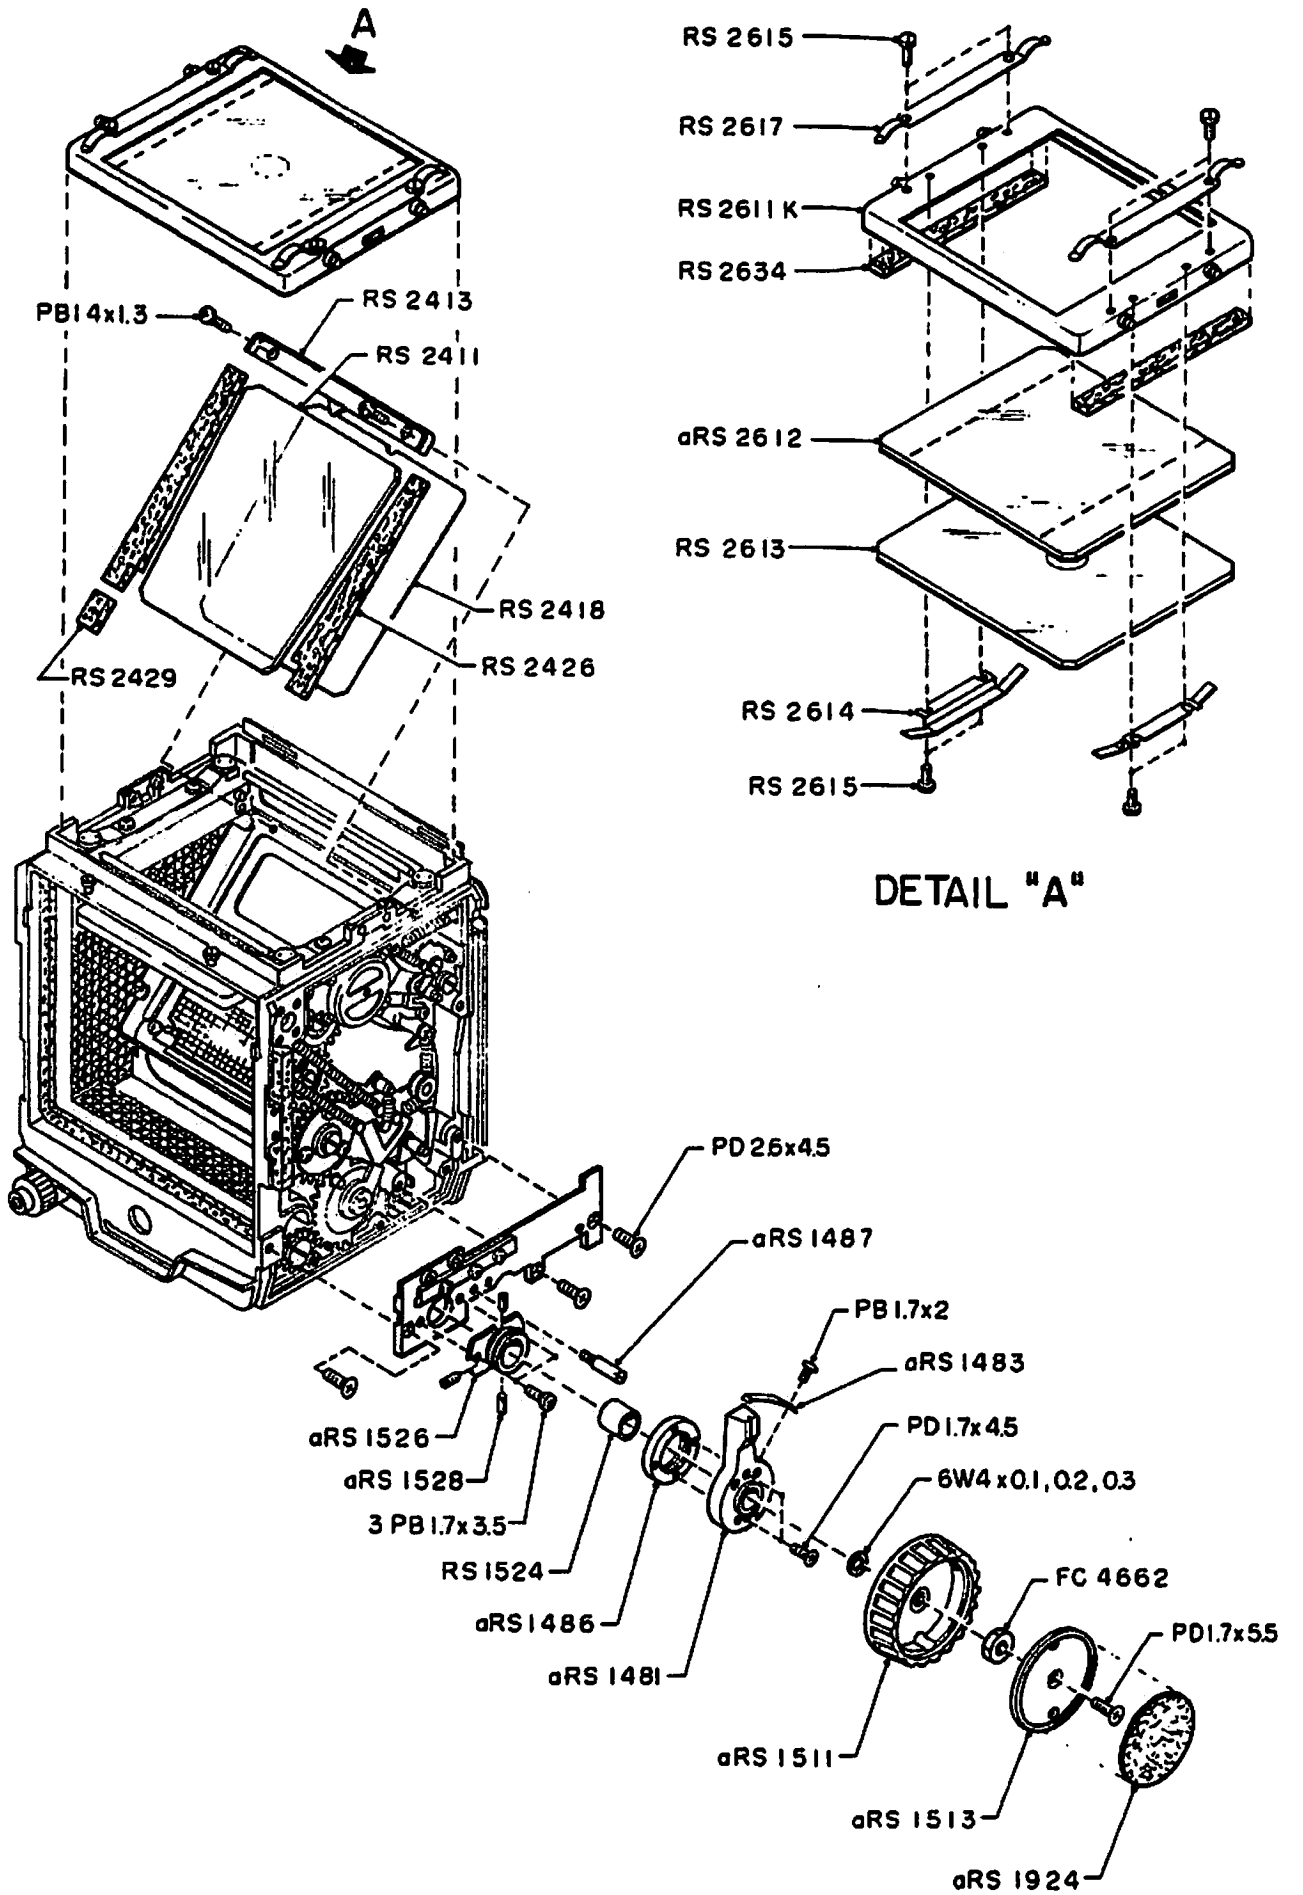
A
RS 2615
RS 2617
RS 2611 K
RS 2634
aRS 2612
RS 2613
RS 2614
RS 2615
PB 1.4x1.3
RS 2413
RS 2411
RS 2418
RS 2426
RS 2429
DETAIL "A"
PD 2.6x4.5
aRS 1487
PB 1.7x2
aRS 1483
PD 1.7x4.5
6W4 x 0.1, 0.2, 0.3
FC 4662
PD 1.7x5.5
aRS 1924
aRS 1513
aRS 1511
aRS 1481
aRS 1486
RS 1524
3 PB 1.7x3.5
aRS 1528
aRS 1526

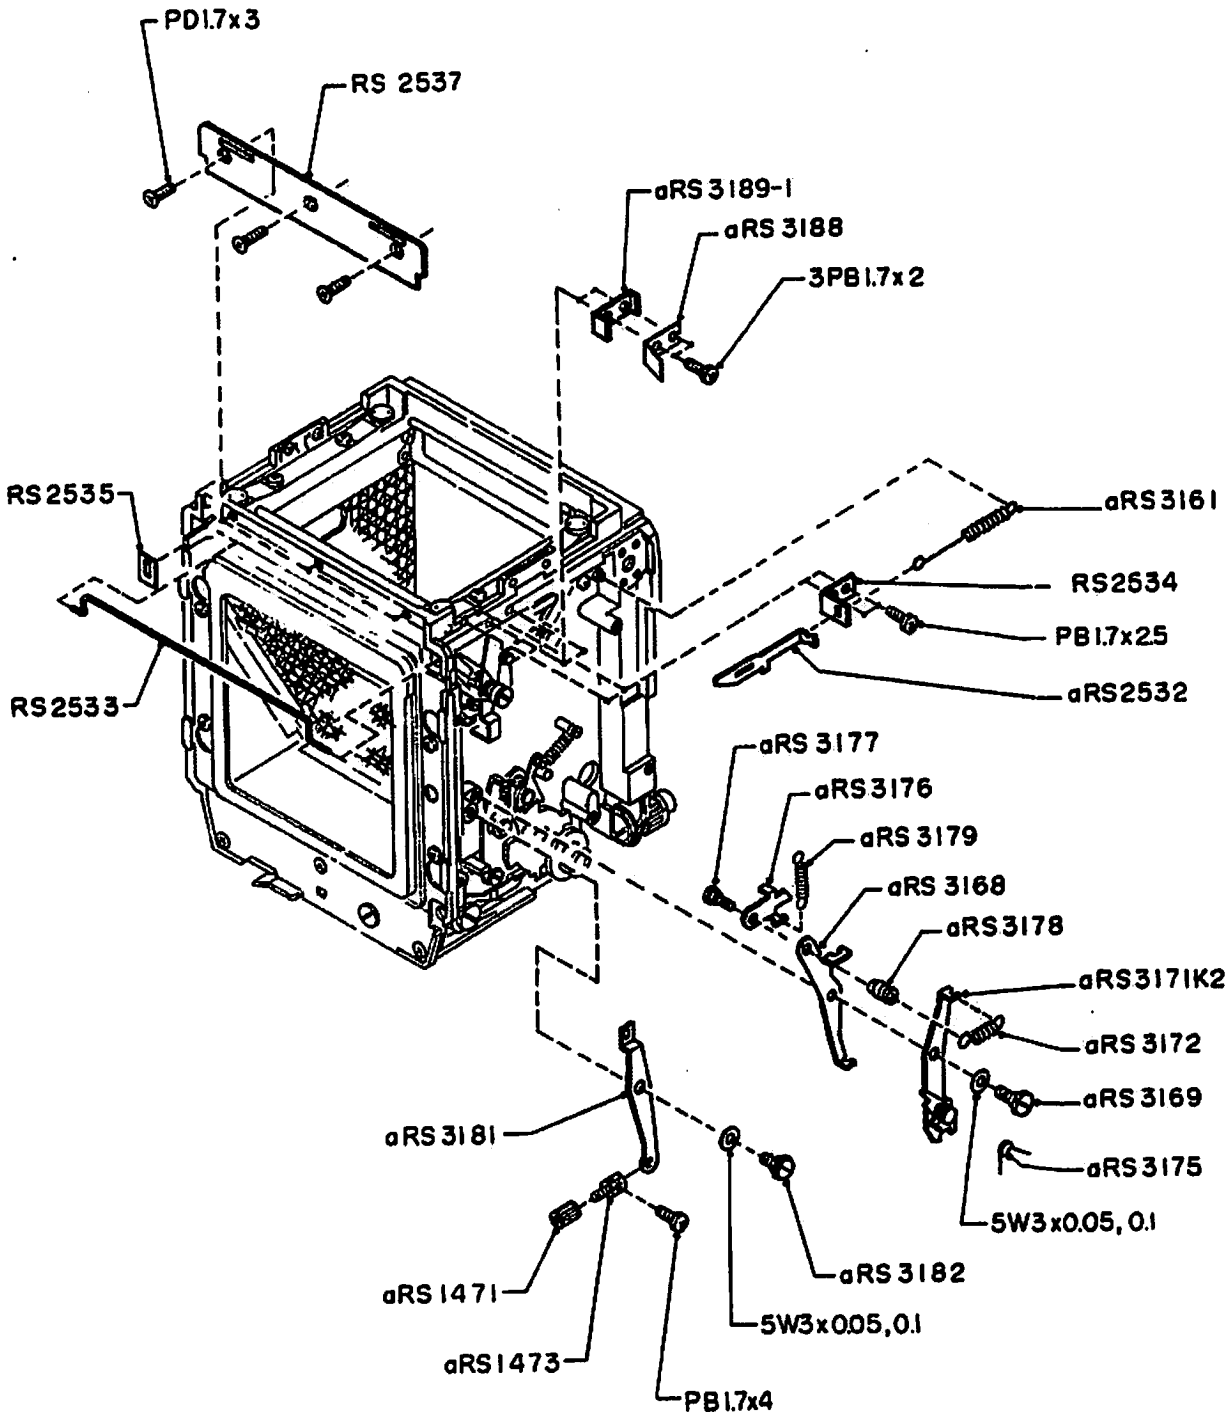
PD1.7x3
RS 2537
aRS 3189-1
aRS 3188
3PB1.7x2
RS2535
RS2533
aRS3161
RS2534
PB1.7x25
aRS2532
aRS 3177
aRS3176
aRS 3179
aRS 3168
aRS3178
aRS3171K2
aRS 3172
aRS 3169
aRS 3175
5W3x0.05, 0.1
aRS 3181
aRS 1471
aRS 1473
PB1.7x4
5W3x0.05,0.1
aRS 3182

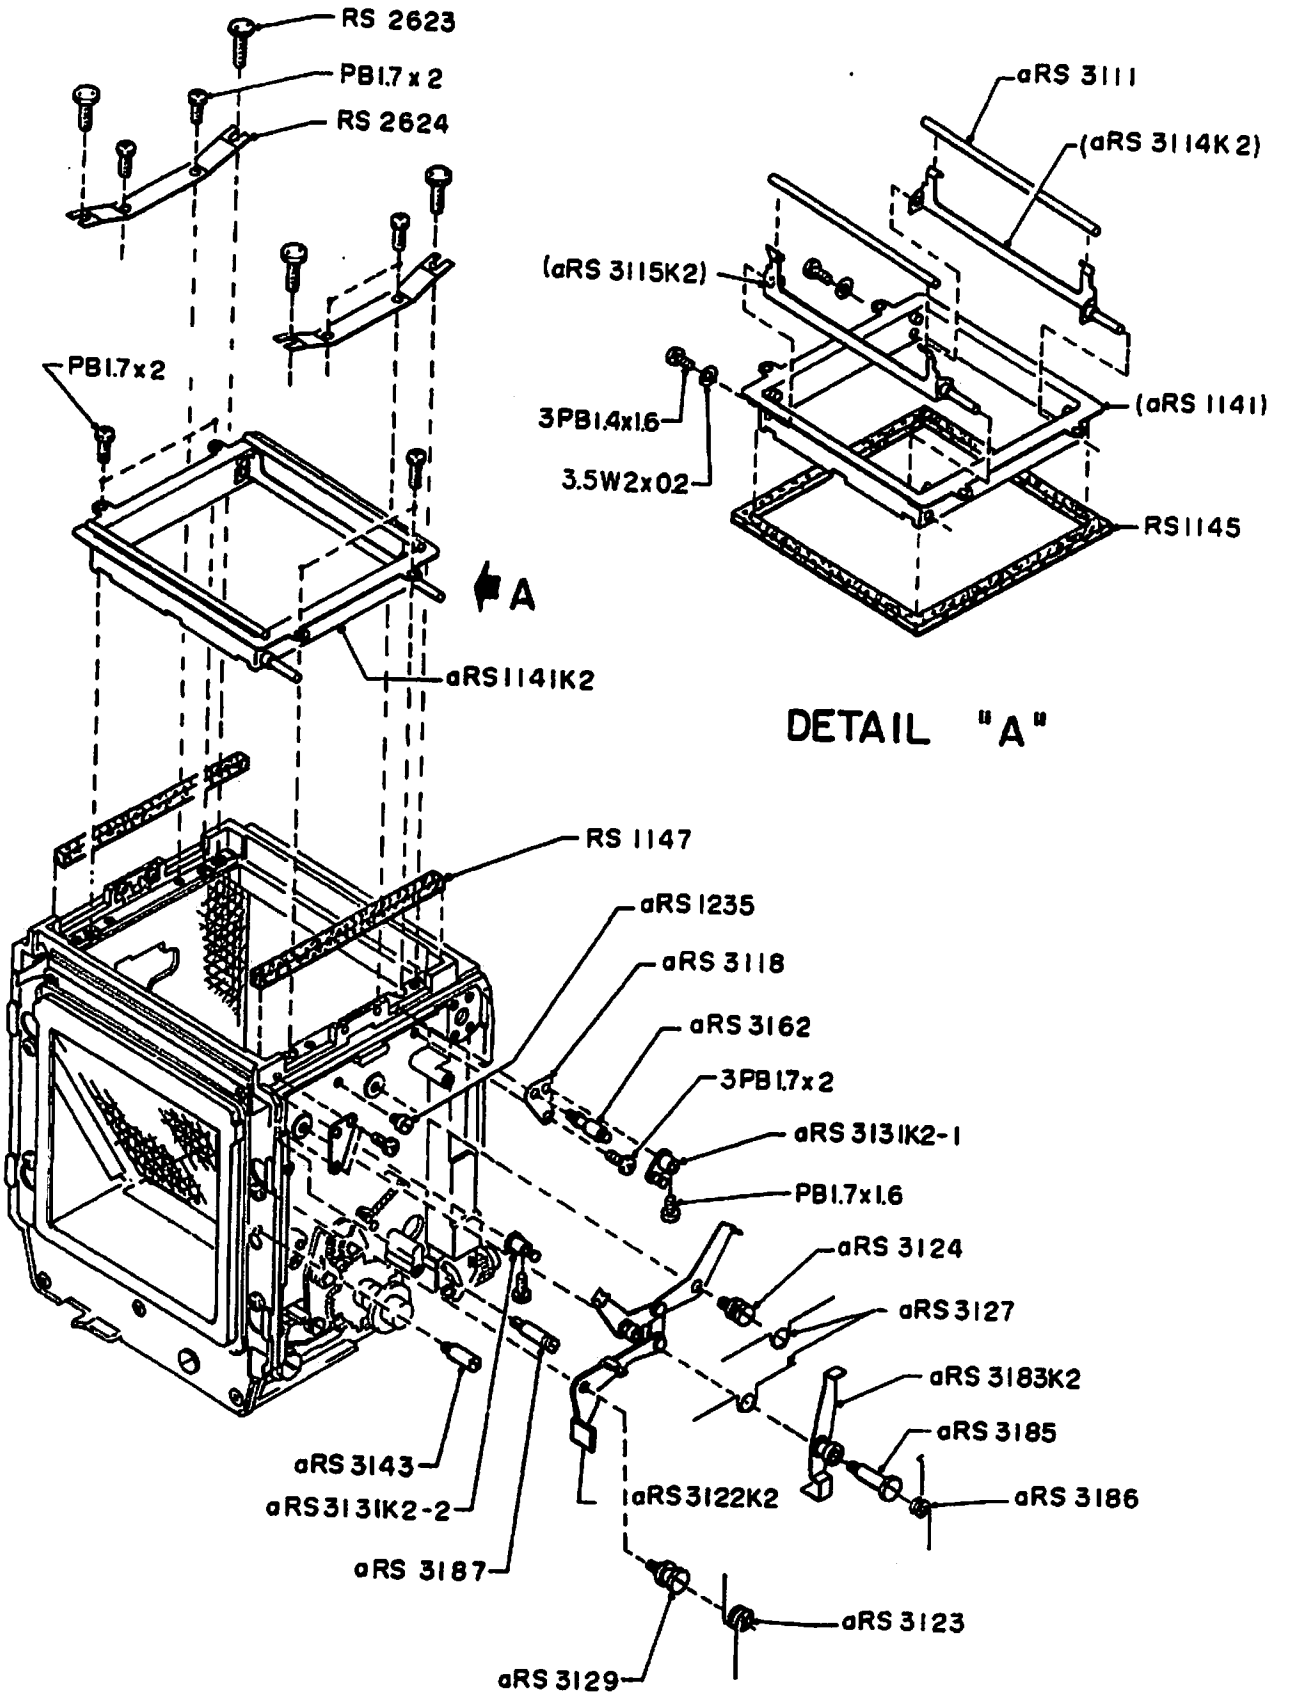
RS 2623
PB1.7 x 2
RS 2624
PB1.7x2
A
aRS 1141K2
aRS 3111
(aRS 3114K 2)
(aRS 3115K2)
3PB1.4x1.6
3.5W2x02
(aRS 1141)
RS1145
DETAIL "A"
RS 1147
aRS 1235
aRS 3118
aRS 3162
3PB1.7x2
aRS 3131K2-1
PB1.7x1.6
aRS 3124
aRS 3127
aRS 3183K2
aRS 3185
aRS 3186
aRS 3143
aRS 3131K2-2
aRS 3187
aRS3122K2
aRS 3123
aRS 3129

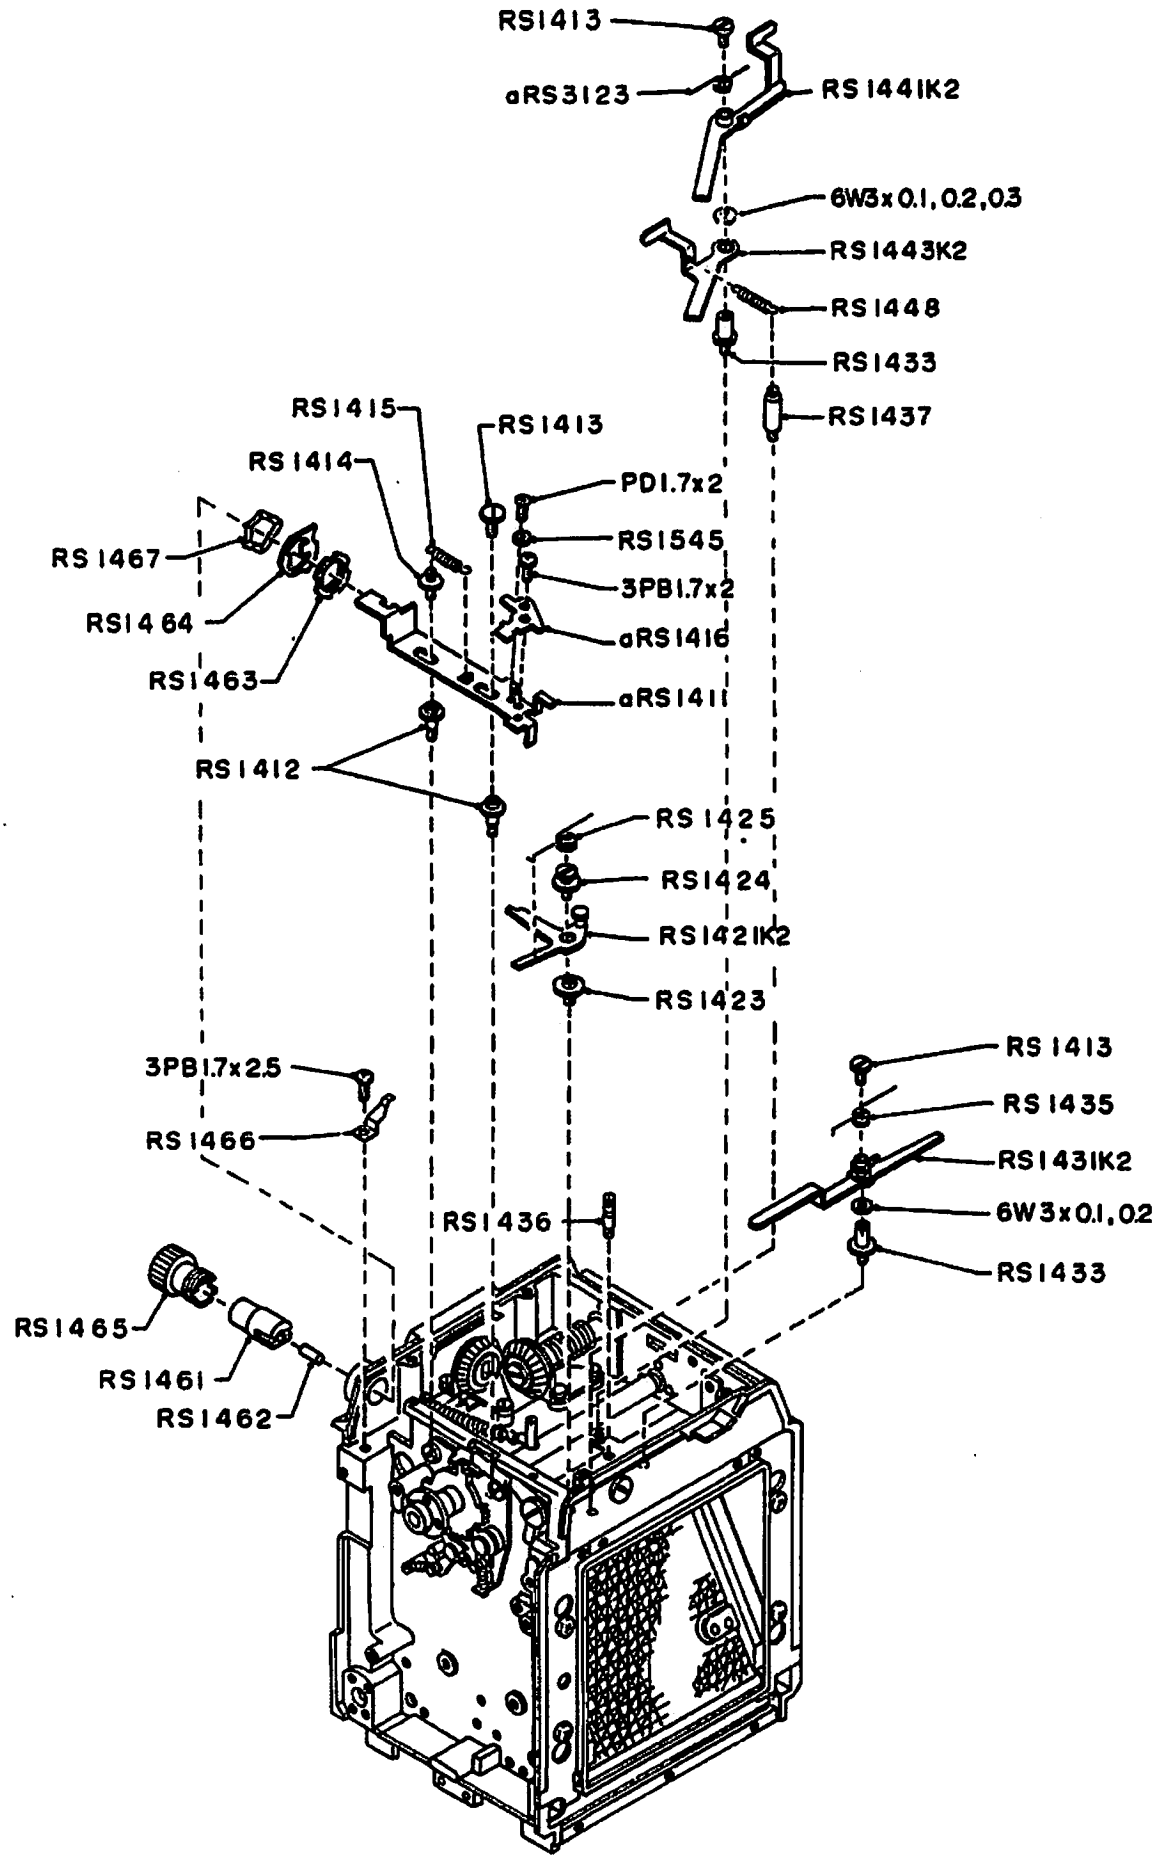
RS1413
aRS3123
RS1441K2
6W3x0.1,0.2,0.3
RS1443K2
RS1448
RS1433
RS1437
RS1415
RS1413
RS1414
PD1.7x2
RS1545
3PB1.7x2
aRS1416
aRS1411
RS1467
RS1464
RS1463
RS1412
RS1425
RS1424
RS1421K2
RS1423
3PB1.7x2.5
RS1466
RS1413
RS1435
RS1431K2
6W3x0.1,0.2
RS1433
RS1436
RS1465
RS1461
RS1462

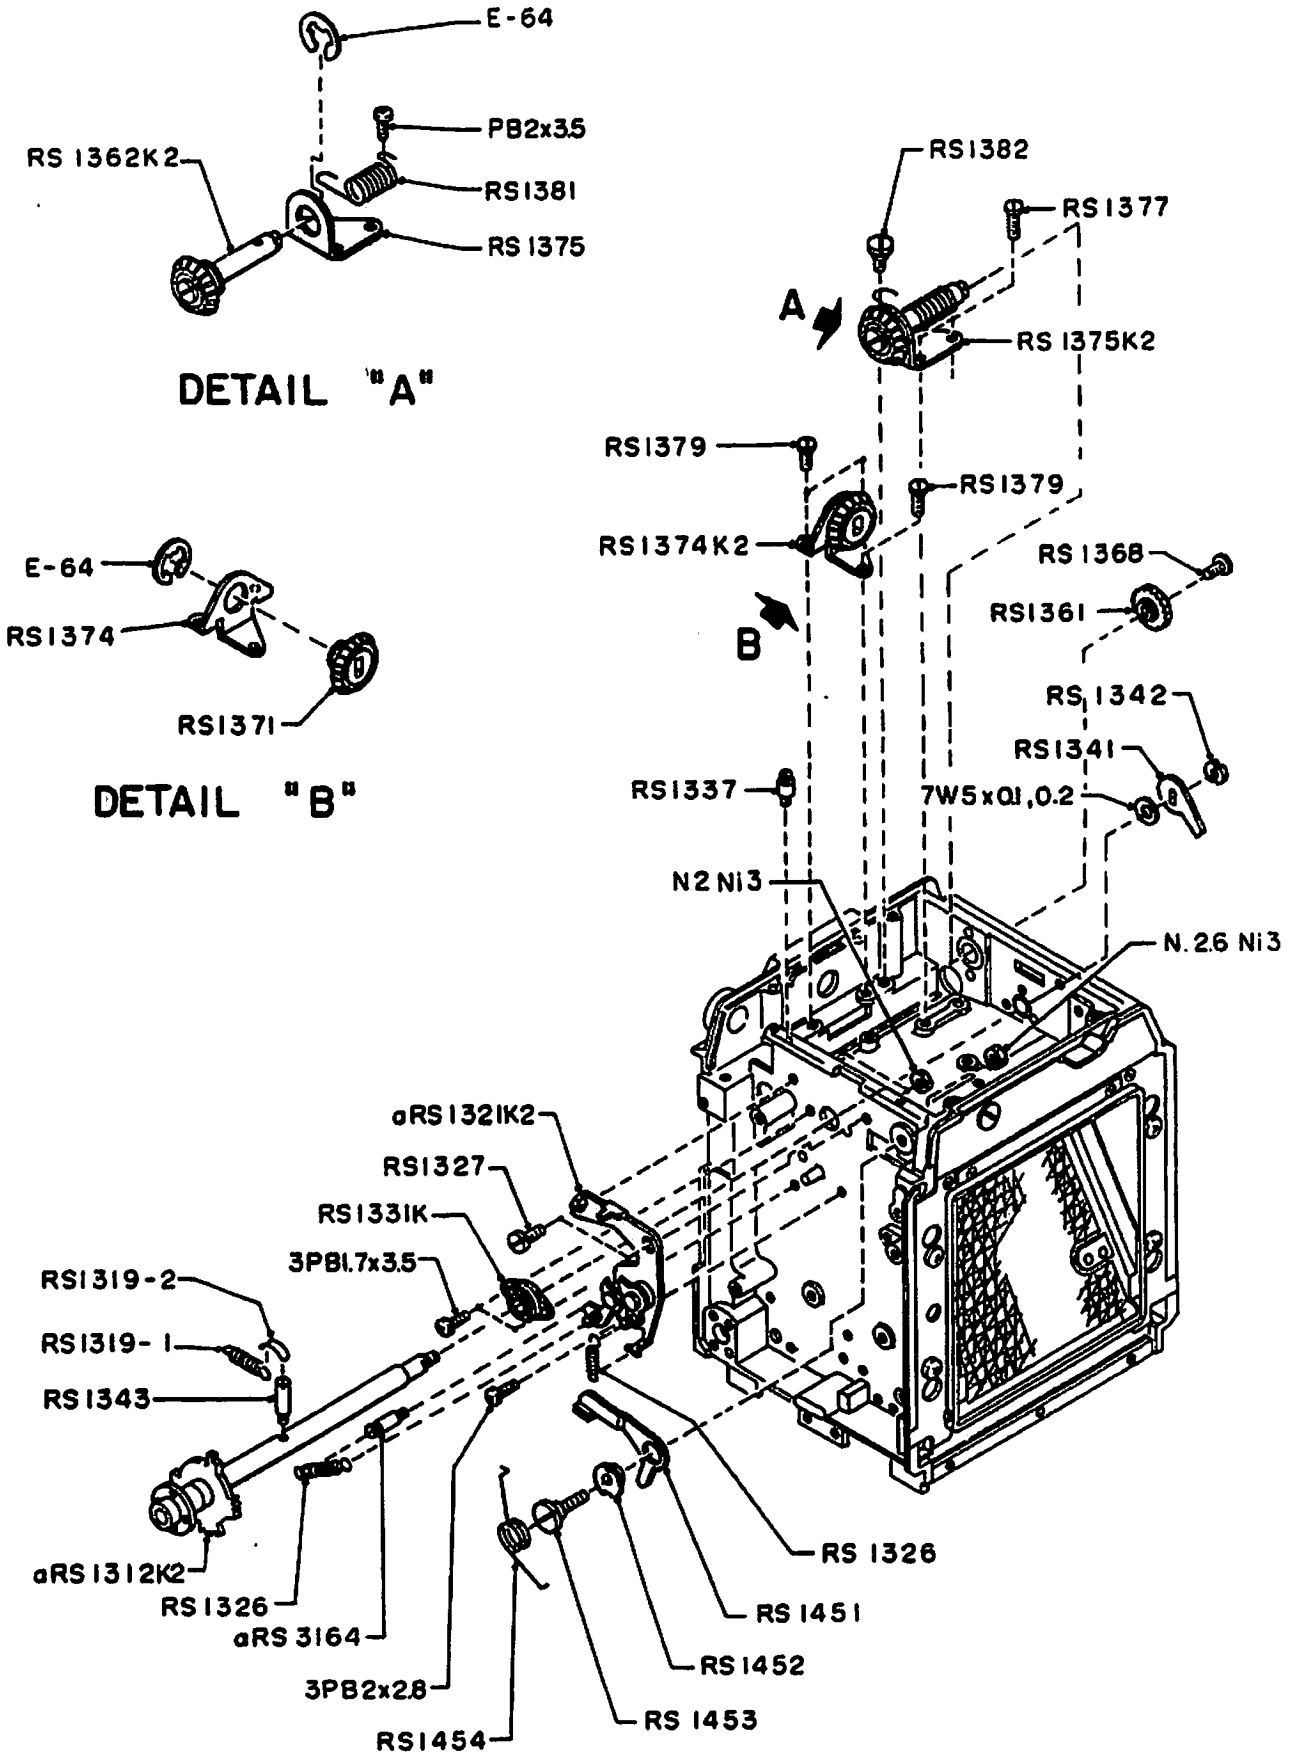
E-64
PB2x3.5
RS 1362K2
RS1381
RS 1375
DETAIL "A"
E-64
RS1374
RS1371
DETAIL "B"
RS1382
RS1377
A
RS 1375K2
RS1379
RS1379
RS1374K2
RS 1368
RS1361
B
RS 1342
RS1341
RS1337
7W5x01,0.2
N2 Ni3
N. 2.6 Ni3
aRS1321K2
RS1327
RS1331K
3PB1.7x3.5
RS1319-2
RS1319-1
RS1343
aRS1312K2
RS1326
aRS 3164
3PB2x2.8
RS1454
RS 1326
RS 1451
RS1452
RS 1453

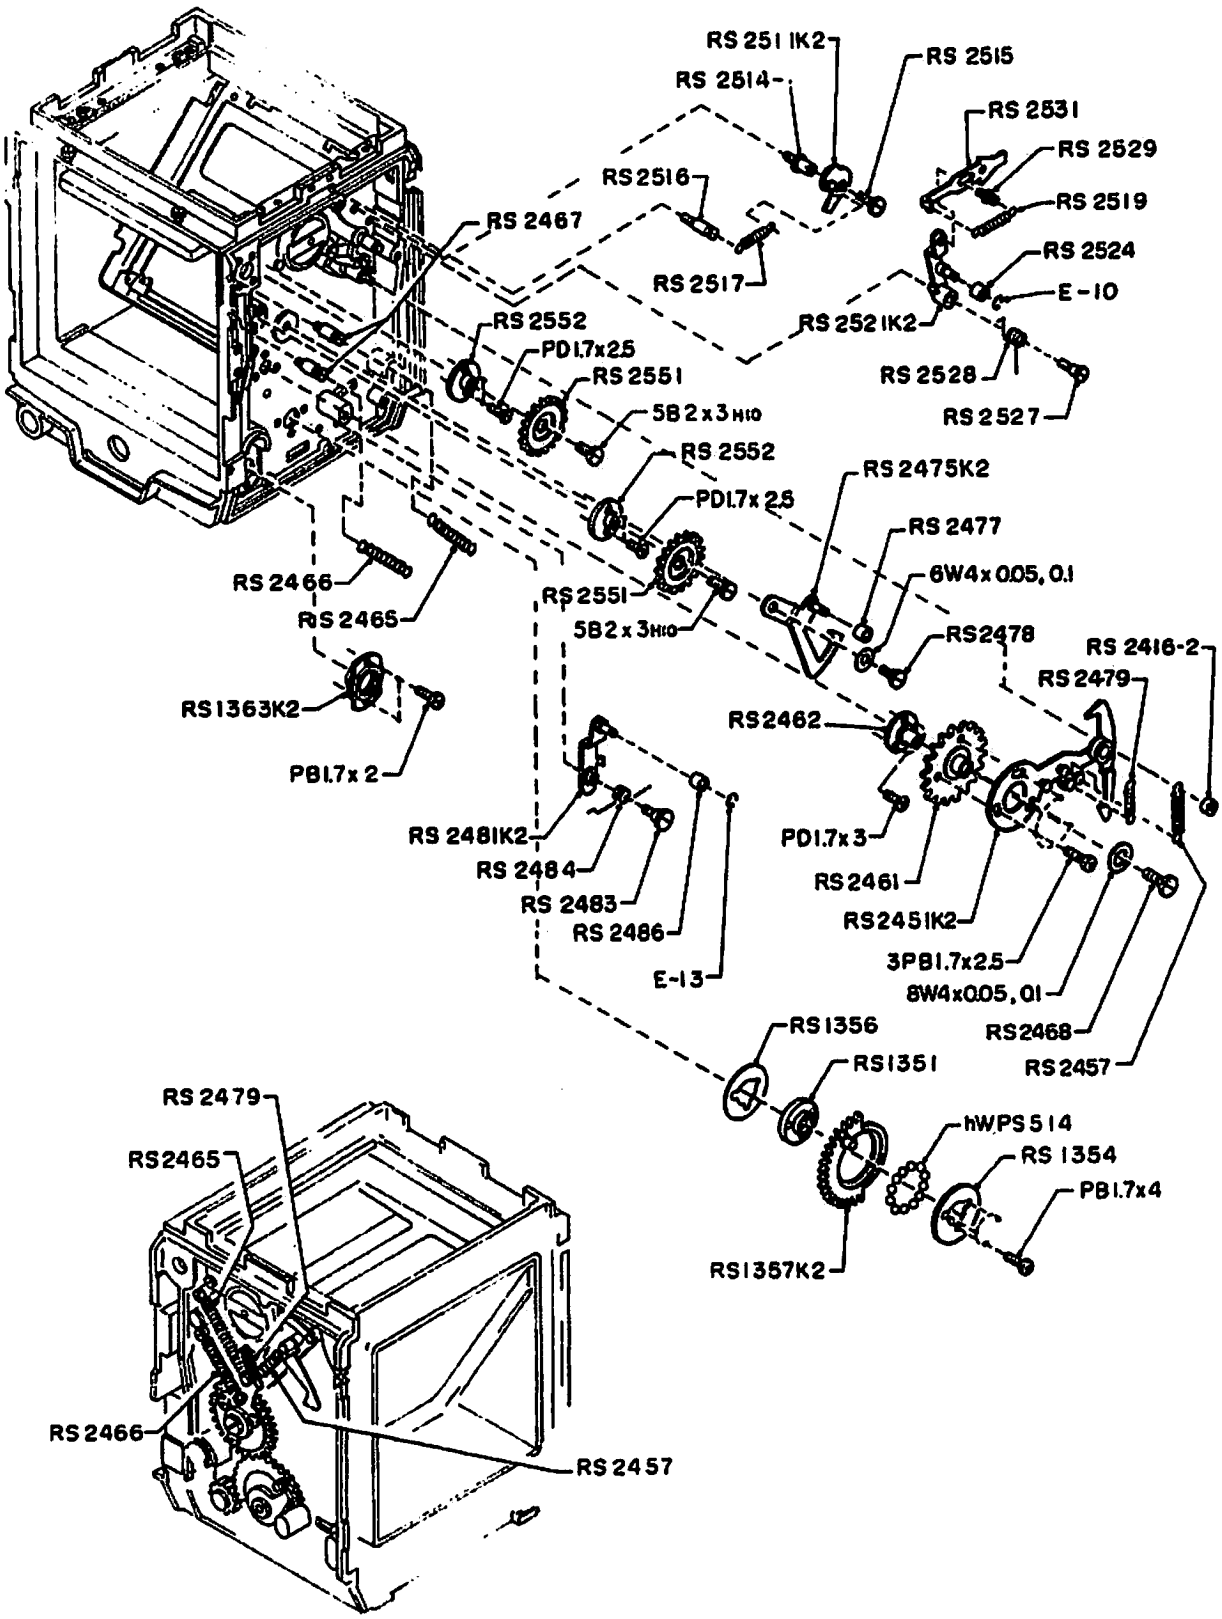
RS 2511K2
RS 2515
RS 2514
RS 2531
RS 2529
RS 2516
RS 2519
RS 2467
RS 2524
RS 2517
E-10
RS 2521K2
RS 2552
PD1.7x2.5
RS 2528
RS 2551
RS 2527
5B2x3HI0
RS 2552
RS 2475K2
PD1.7x2.5
RS 2477
RS 2466
6W4x0.05, 0.1
RS 2551
RS 2465
5B2x3HI0
RS2478
RS 2416-2
RS 2479
RS1363K2
RS2462
PB1.7x2
RS 2481K2
PD1.7x3
RS 2484
RS2461
RS 2483
RS2451K2
RS 2486
3PB1.7x2.5
E-13
8W4x0.05, 01
RS2468
RS1356
RS2457
RS1351
RS 2479
hWPS514
RS2465
RS 1354
PB1.7x4
RS1357K2
RS 2466
RS 2457

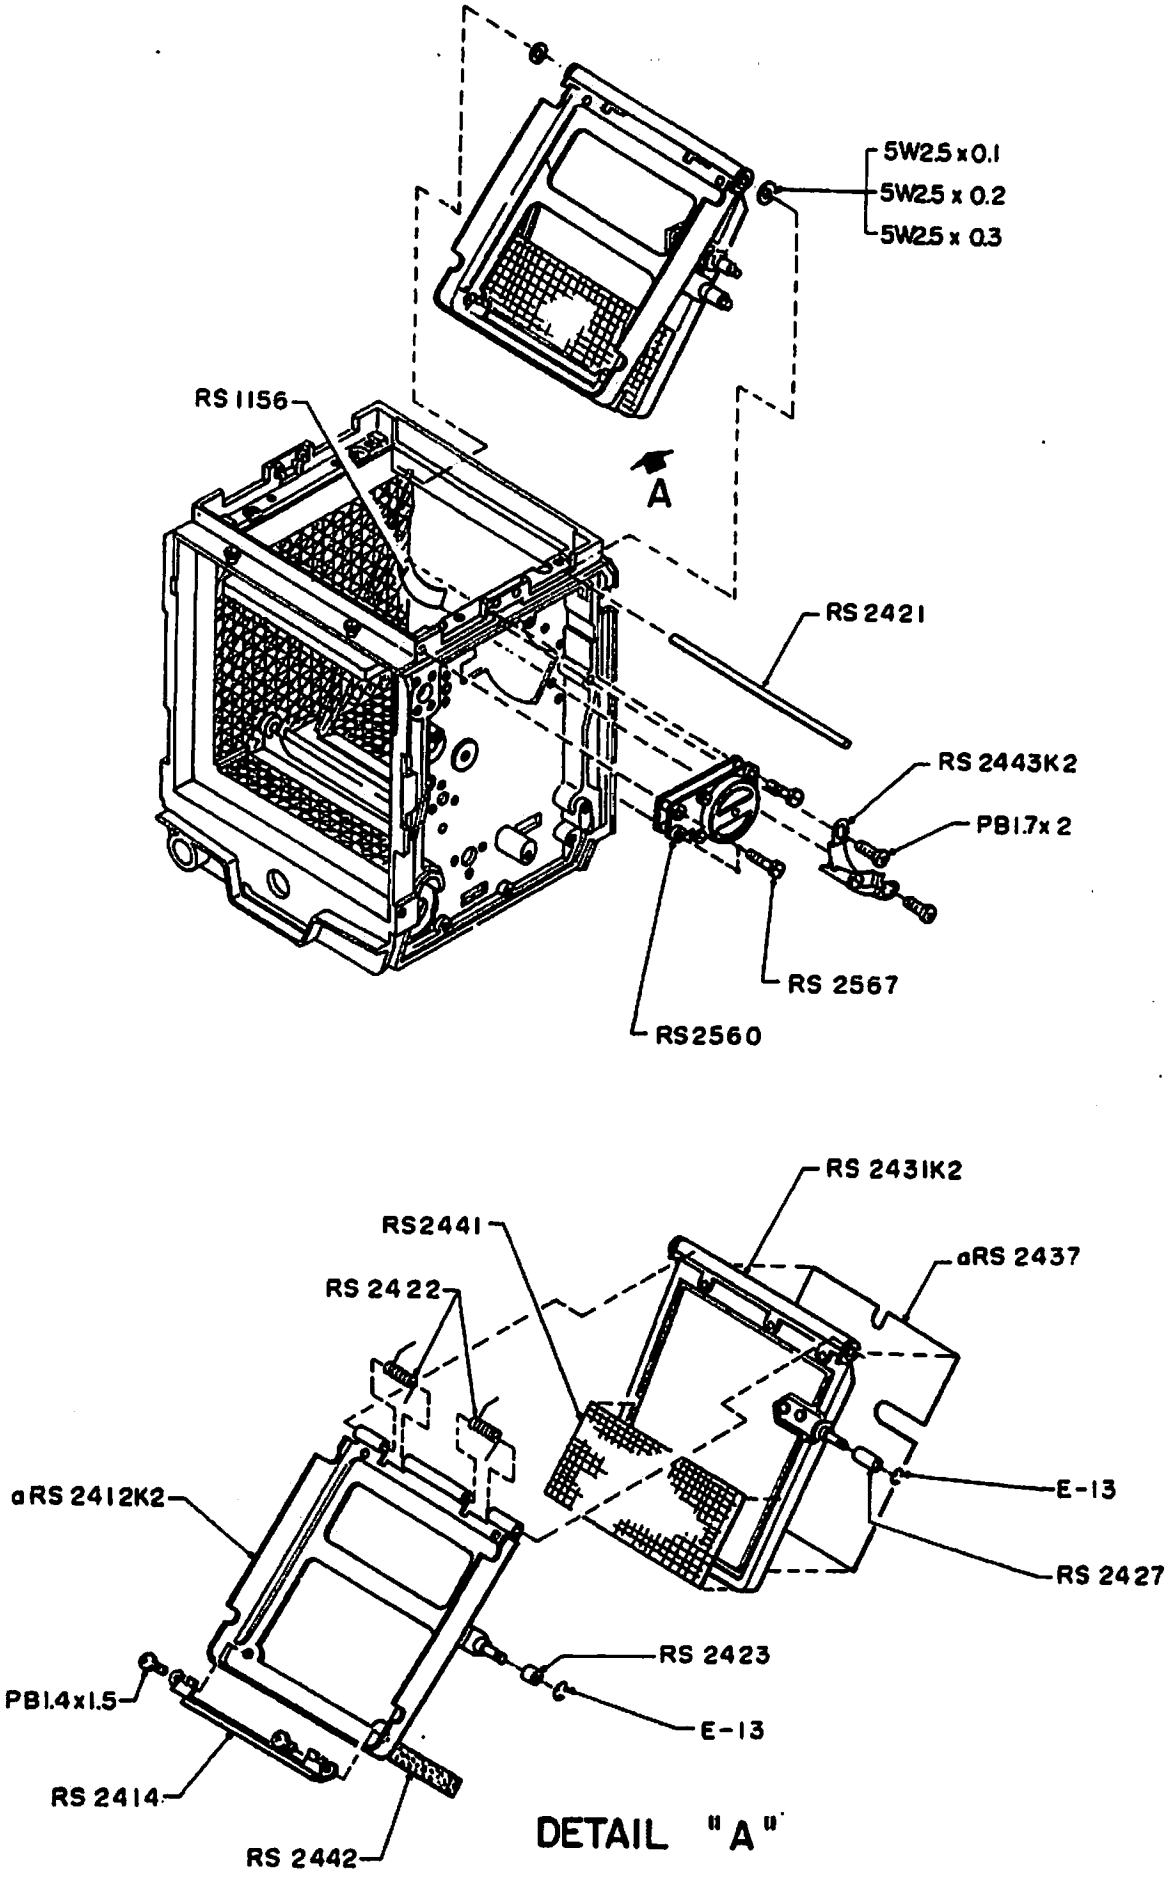
5W2.5 x 0.1
5W2.5 x 0.2
5W2.5 x 0.3
RS 1156
A
RS 2421
RS 2443K2
PB1.7x 2
RS 2567
RS2560
RS 2431K2
RS2441
aRS 2437
RS 2422
E-13
aRS 2412K2
RS 2427
RS 2423
PB1.4x1.5
E-13
RS 2414
RS 2442
DETAIL "A"

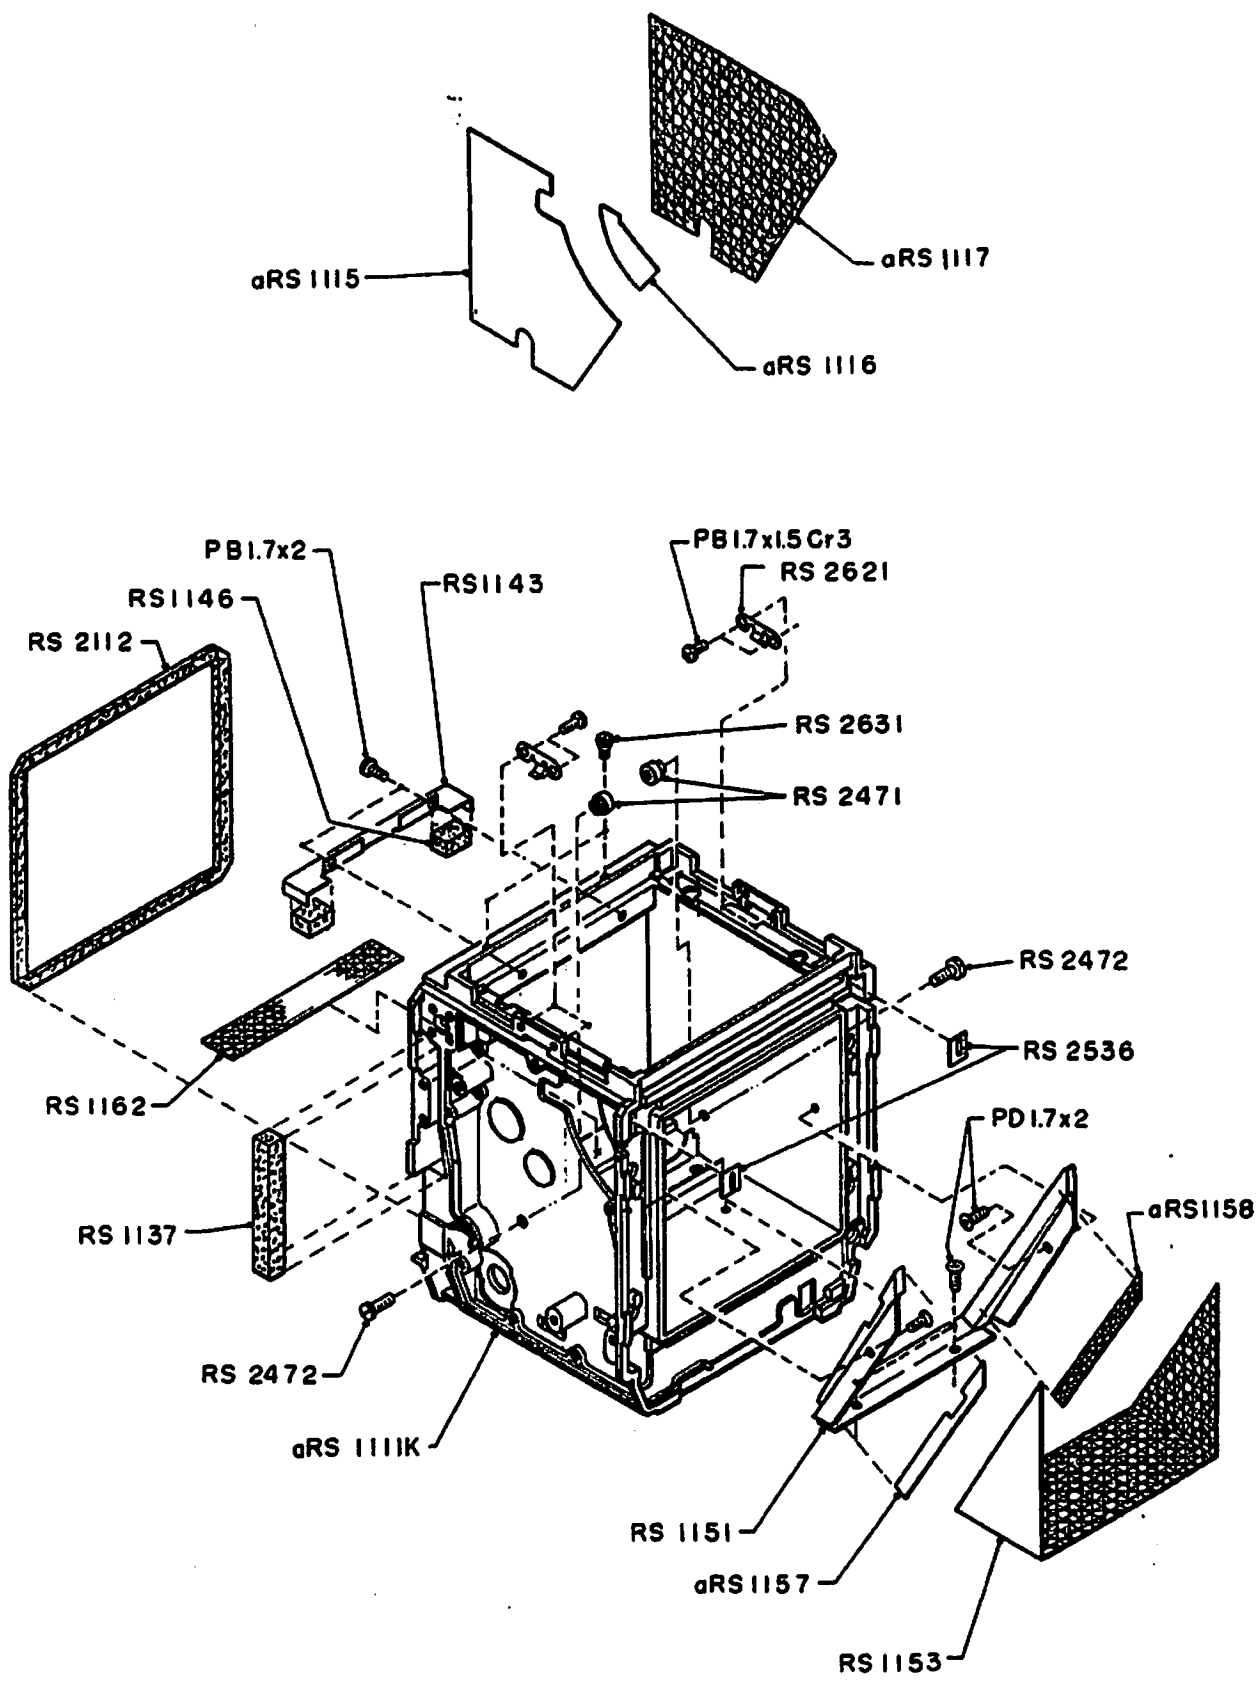
aRS 1115
aRS 1117
aRS 1116
PB1.7x2
RS1146
RS 2112
RS1143
PB1.7x1.5Cr3
RS 2621
RS 2631
RS 2471
RS 2472
RS 2536
PD1.7x2
aRS1158
RS 1162
RS 1137
RS 2472
aRS 1111K
RS 1151
aRS1157
RS 1153

Focusing Hood

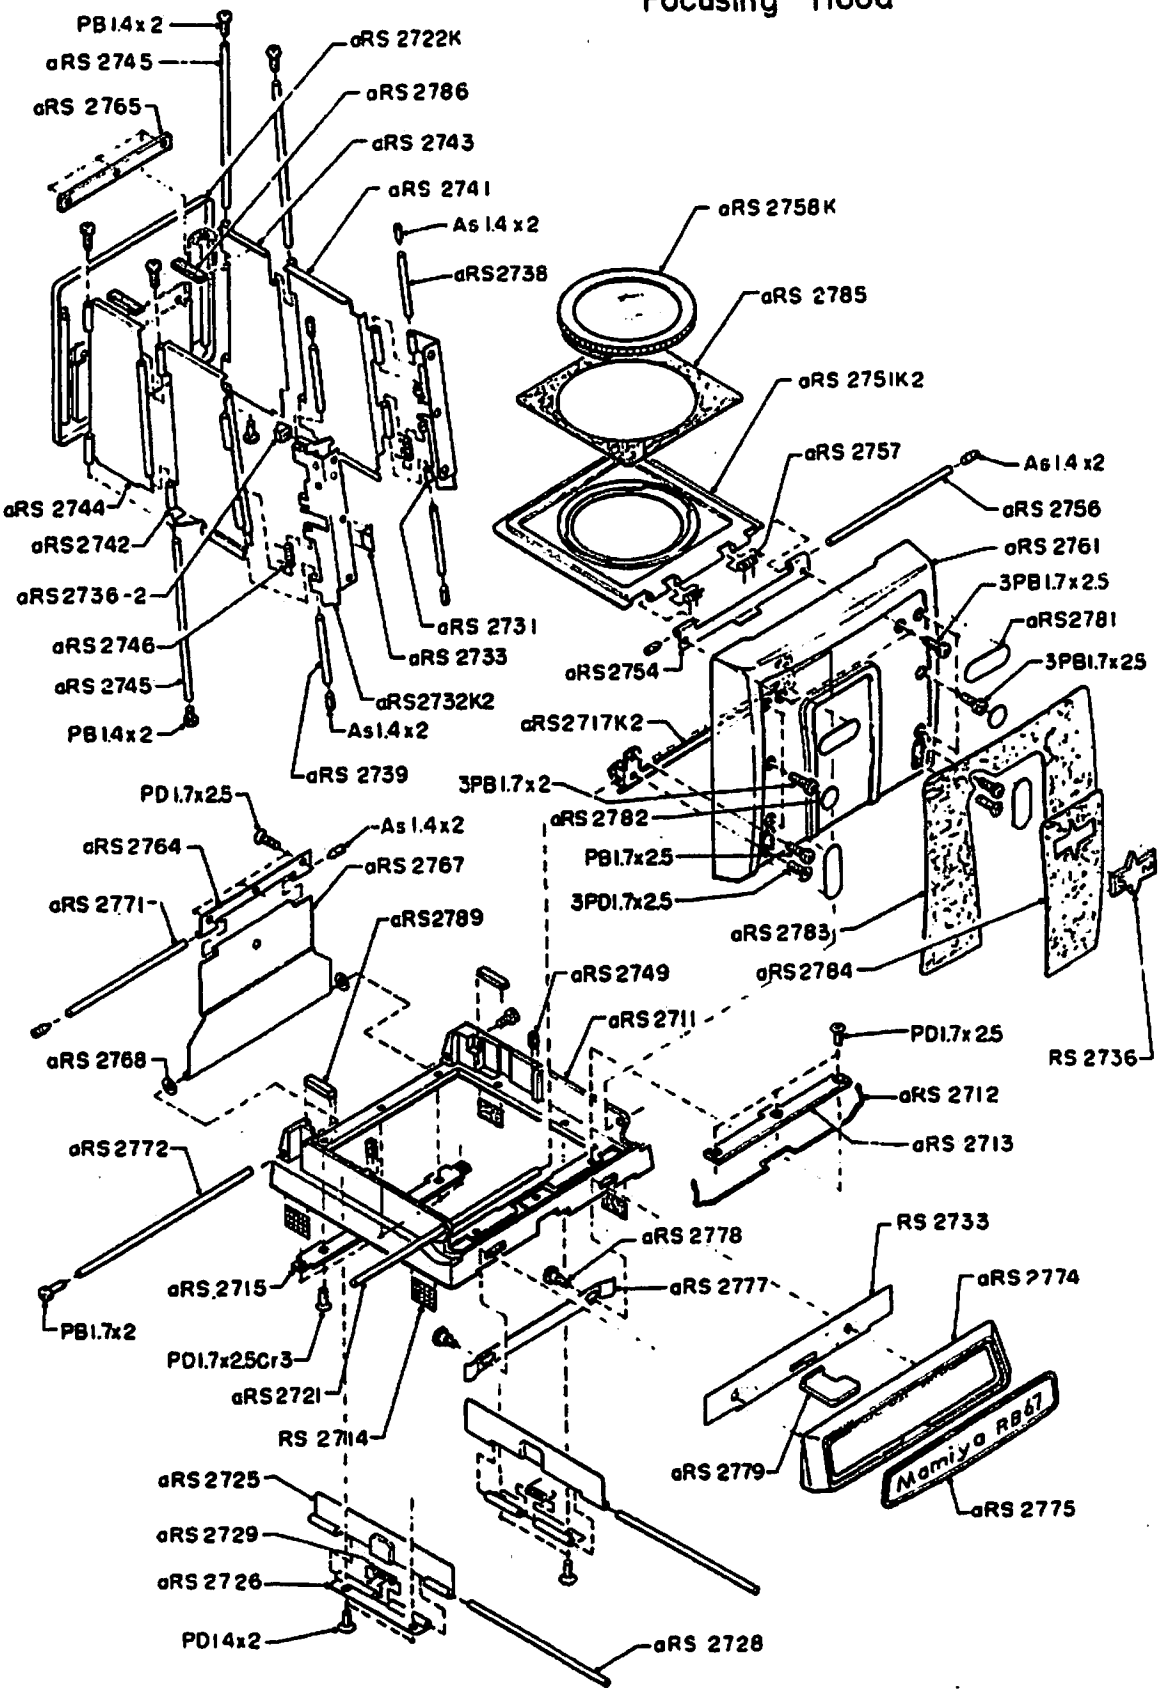

Revolving Adapter

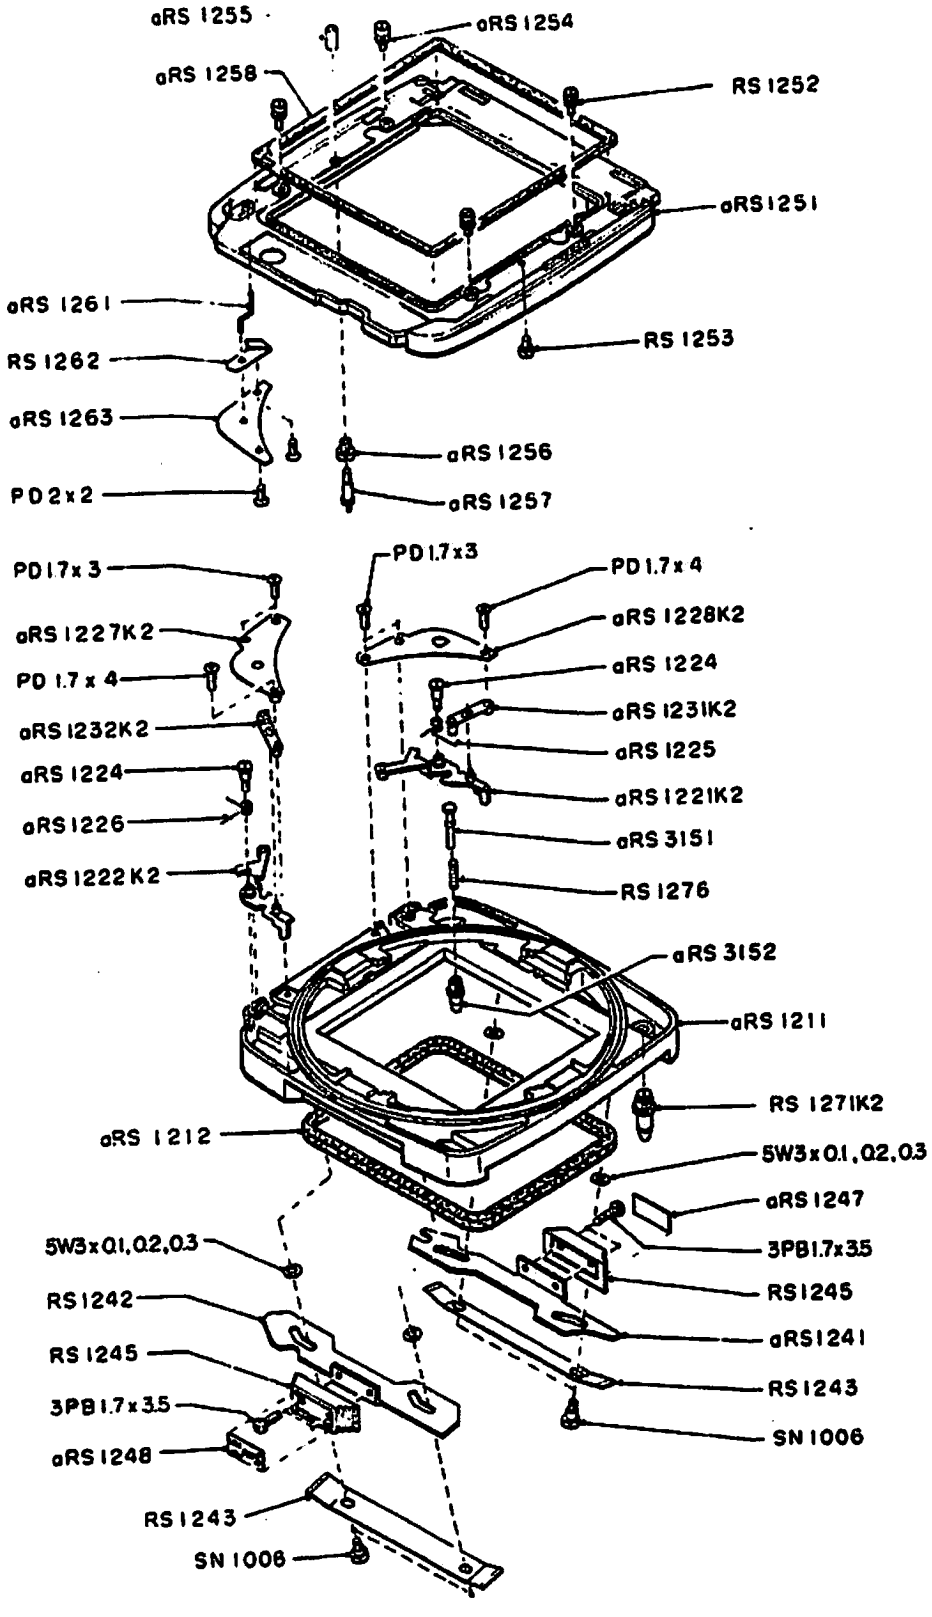

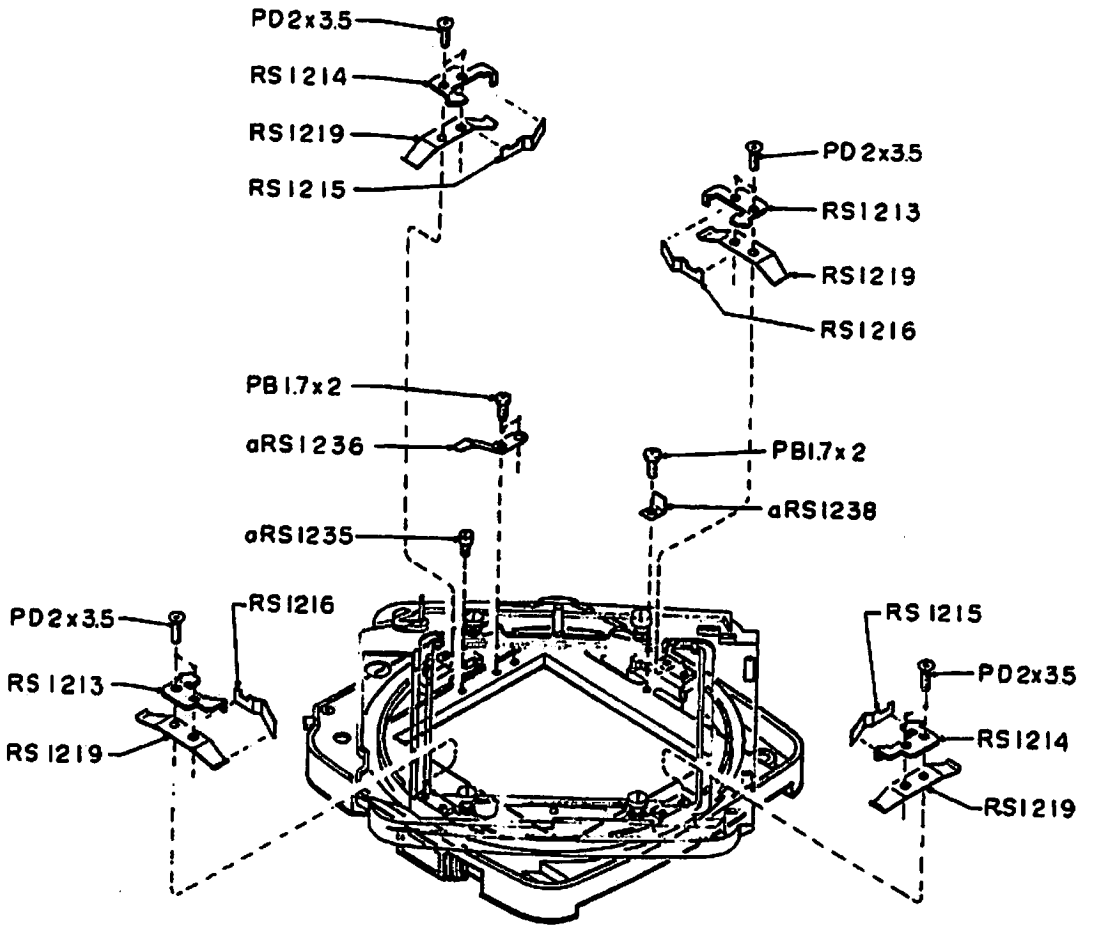
PD2x3.5
RS1214
RS1219
RS1215
PD2x3.5
RS1213
RS1219
RS1216
PB1.7x2
aRS1236
PB1.7x2
aRS1238
aRS1235
PD2x3.5
RS1213
RS1219
RS1216
RS1215
PD2x3.5
RS1214
RS1219

Rool Film Holder for mamiya RB67 PROS

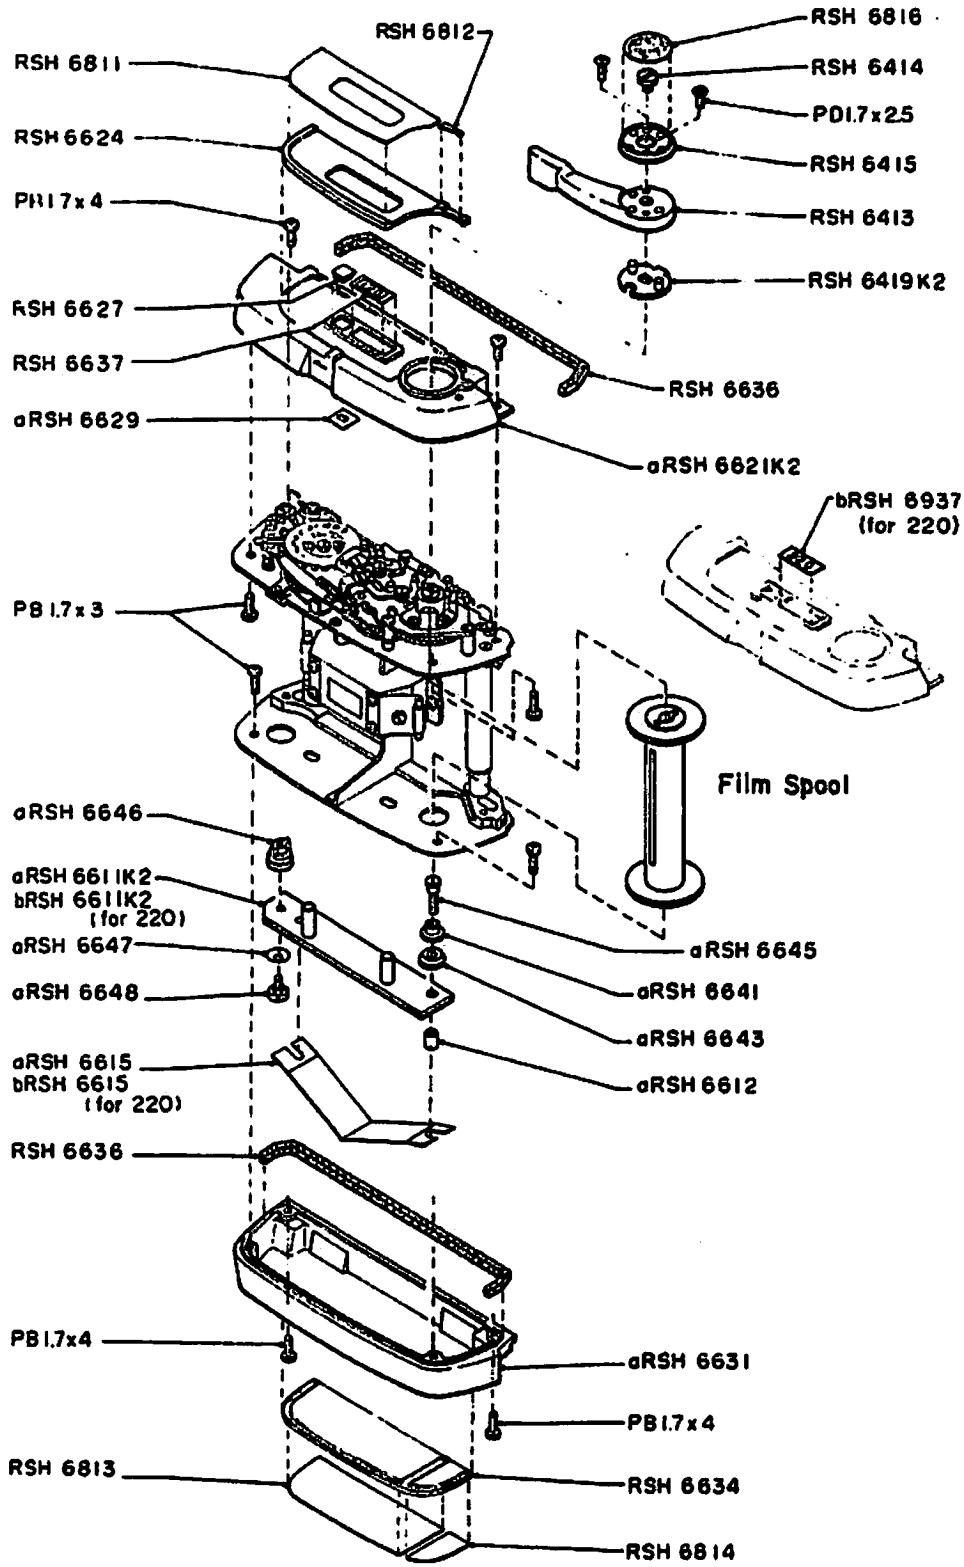

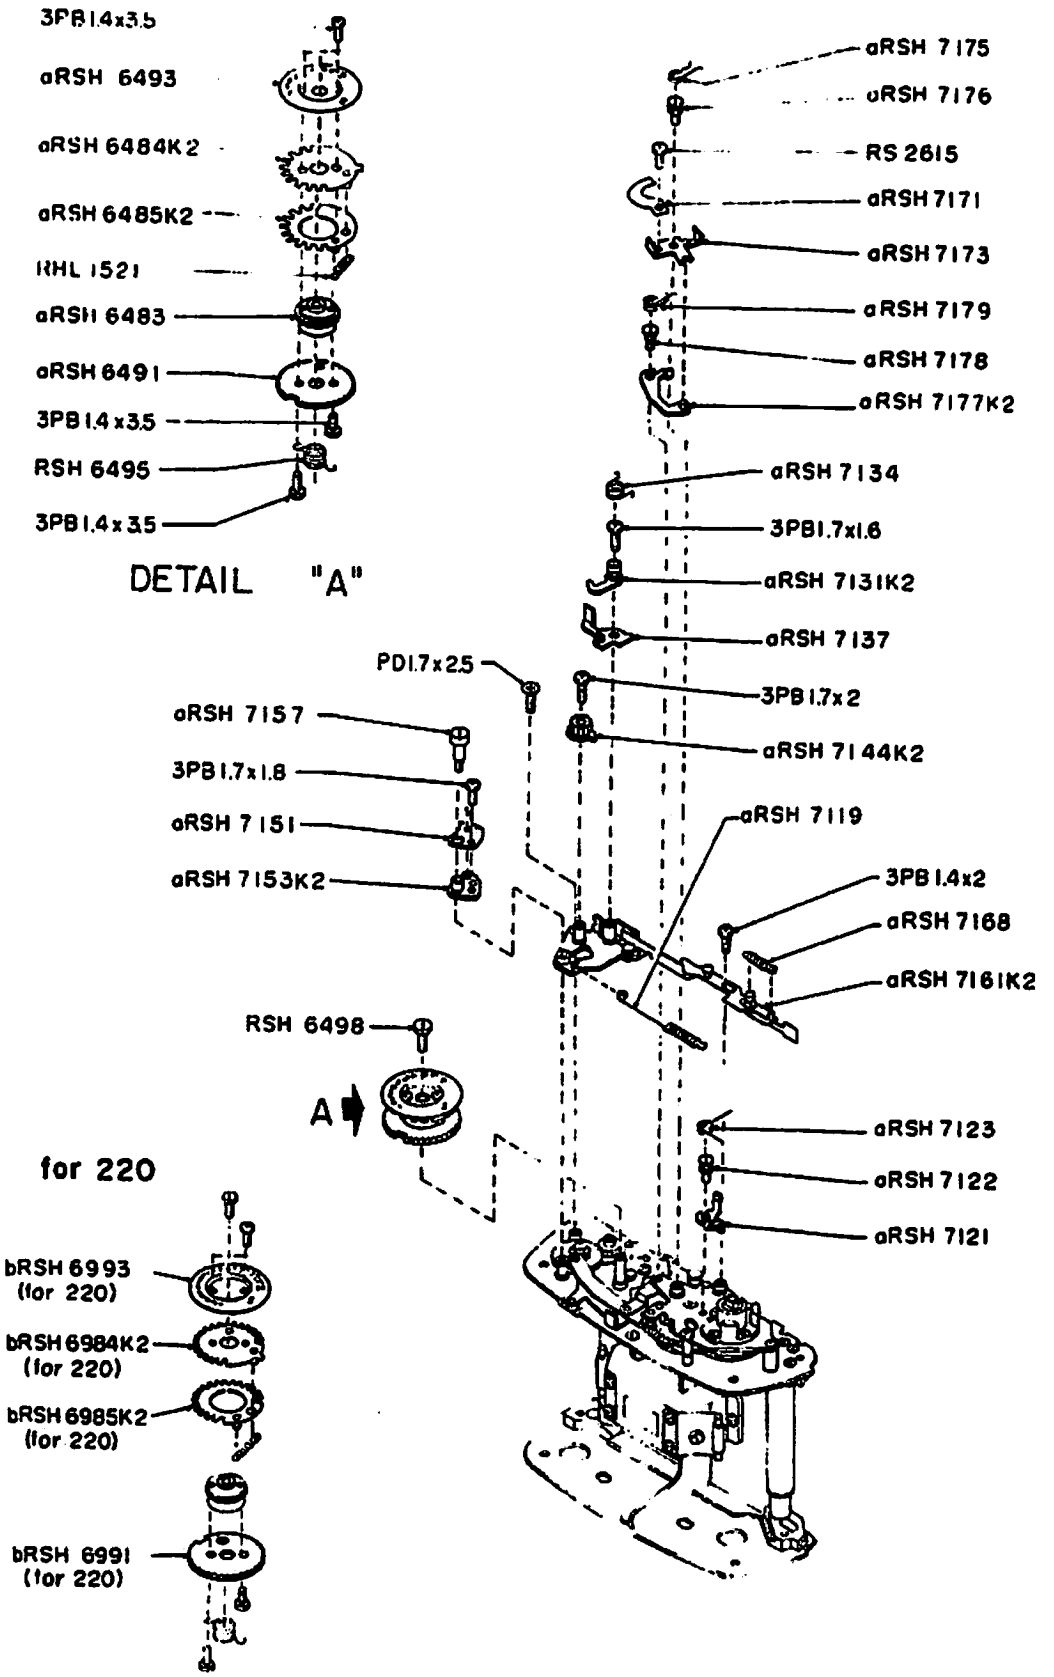
3PB1.4x3.5
aRSH 6493
aRSH 6484K2
aRSH 6485K2
RHL 1521
aRSH 6483
aRSH 6491
3PB1.4x3.5
RSH 6495
3PB1.4x3.5
DETAIL "A"
aRSH 7175
aRSH 7176
RS 2615
aRSH 7171
aRSH 7173
aRSH 7179
aRSH 7178
aRSH 7177K2
aRSH 7134
3PB1.7x1.6
aRSH 7131K2
aRSH 7137
PD1.7x2.5
3PB1.7x2
aRSH 7144K2
aRSH 7157
3PB1.7x1.8
aRSH 7151
aRSH 7153K2
aRSH 7119
3PB1.4x2
aRSH 7168
aRSH 7161K2
RSH 6498
A
aRSH 7123
aRSH 7122
aRSH 7121
for 220
bRSH 6993
(for 220)
bRSH 6984K2
(for 220)
bRSH 6985K2
(for 220)
bRSH 6991
(for 220)

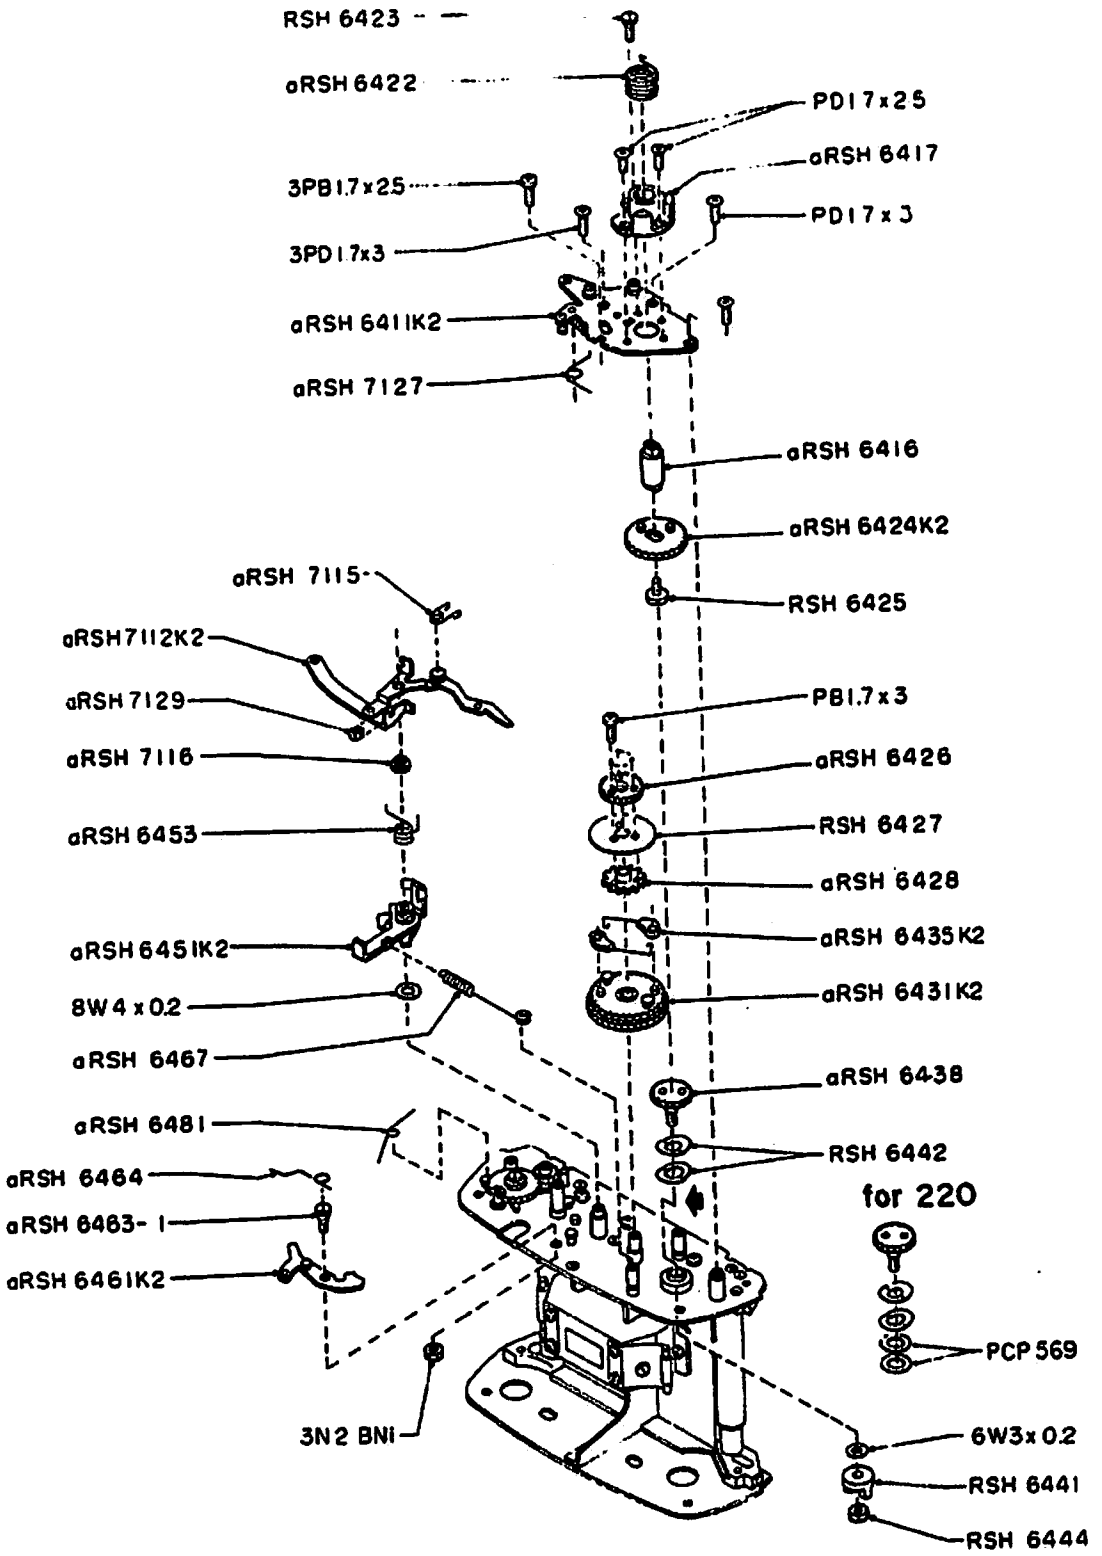
RSH 6423
aRSH 6422
PD1.7x25
aRSH 6417
3PB1.7x25
PD1.7x3
3PD1.7x3
aRSH 6411K2
aRSH 7127
aRSH 6416
aRSH 6424K2
aRSH 7115
RSH 6425
aRSH7112K2
aRSH 7129
PB1.7x3
aRSH 7116
aRSH 6426
aRSH 6453
RSH 6427
aRSH 6428
aRSH 6451K2
aRSH 6435K2
8W4x0.2
aRSH 6431K2
aRSH 6467
aRSH 6438
aRSH 6481
RSH 6442
aRSH 6464
for 220
aRSH 6463-1
aRSH 6461K2
PCP 569
3N2 BNi
6W3x0.2
RSH 6441
RSH 6444

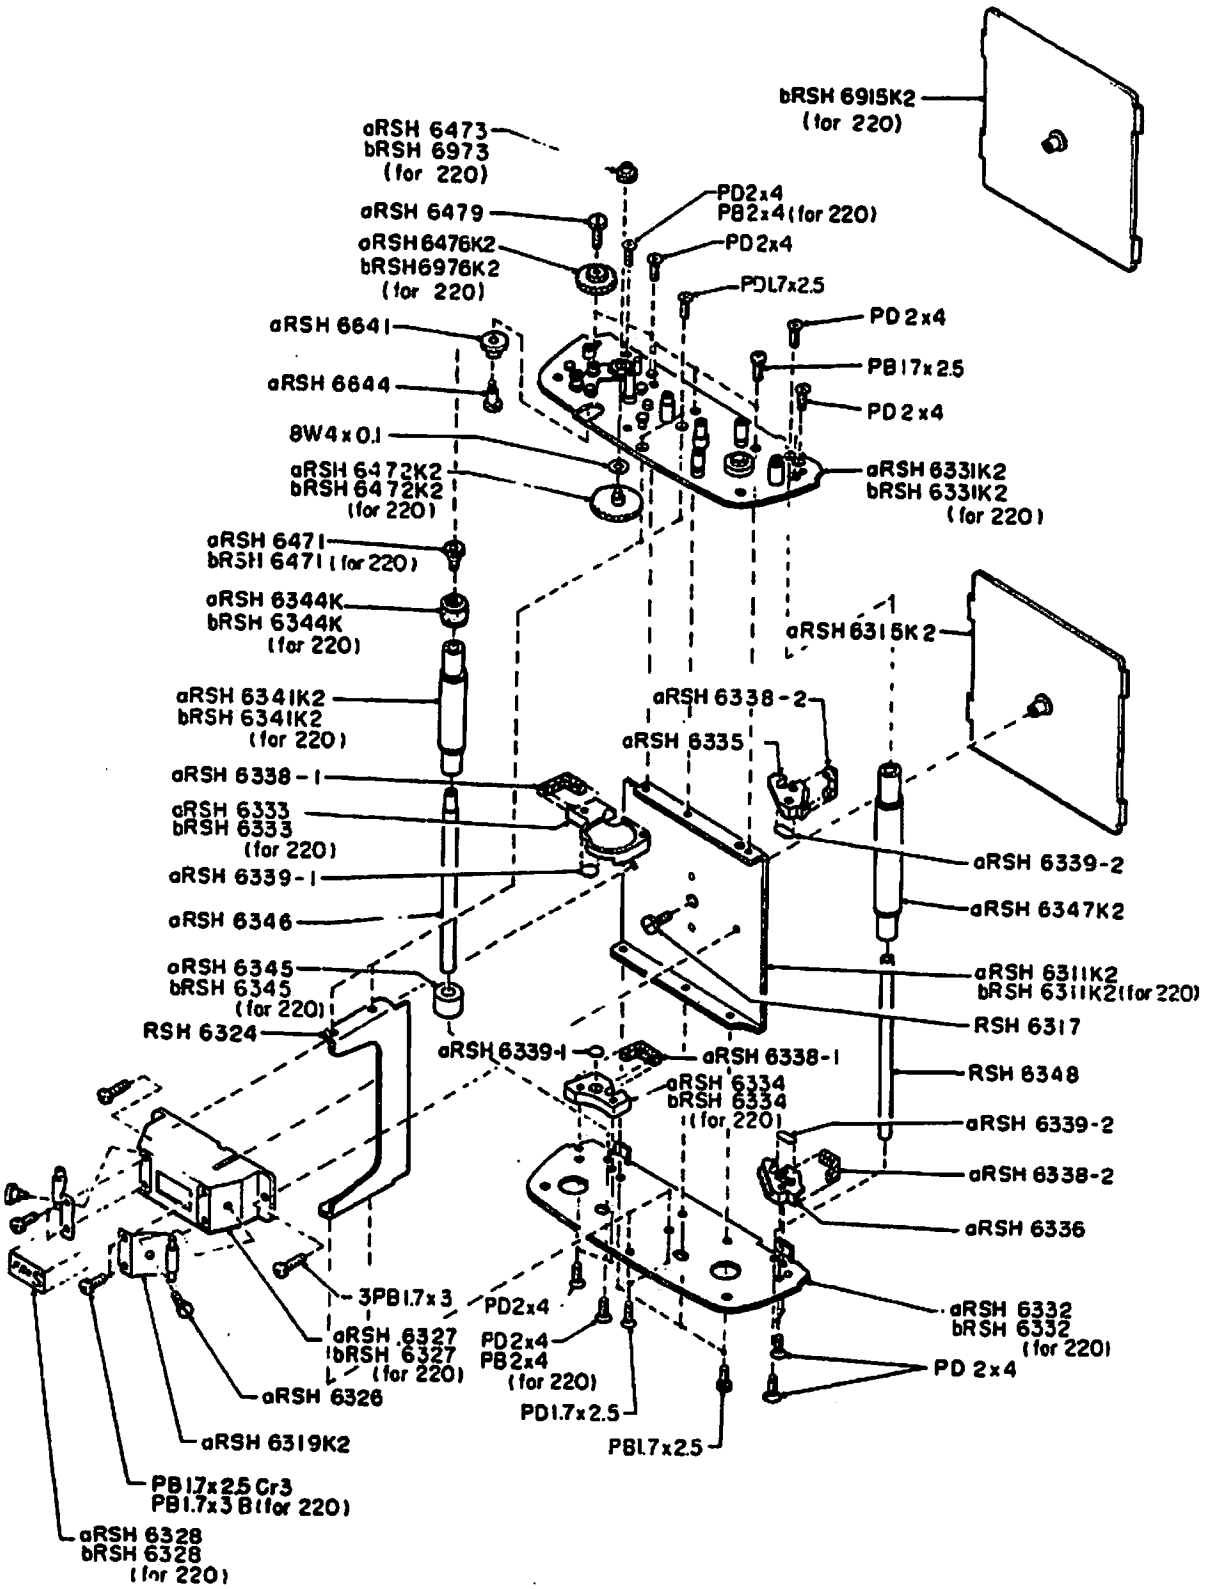
bRSH 6915K2
(for 220)
aRSH 6473
bRSH 6973
(for 220)
aRSH 6479
aRSH 6476K2
bRSH 6976K2
(for 220)
PD2x4
PB2x4 (for 220)
PD2x4
PDL7x2.5
PD 2x4
PB17x2.5
PD 2x4
aRSH 6641
aRSH 6644
8W4x0.1
aRSH 6472K2
bRSH 6472K2
(for 220)
aRSH 6331K2
bRSH 6331K2
(for 220)
aRSH 6471
bRSH 6471 (for 220)
aRSH 6344K
bRSH 6344K
(for 220)
aRSH 6315K2
aRSH 6341K2
bRSH 6341K2
(for 220)
aRSH 6338-2
aRSH 6335
aRSH 6338-1
aRSH 6333
bRSH 6333
(for 220)
aRSH 6339-2
aRSH 6339-1
aRSH 6347K2
aRSH 6346
aRSH 6345
bRSH 6345
(for 220)
aRSH 6311K2
bRSH 6311K2 (for 220)
RSH 6324
RSH 6317
aRSH 6339-1
aRSH 6338-1
RSH 6348
aRSH 6334
bRSH 6334
(for 220)
aRSH 6339-2
aRSH 6338-2
aRSH 6336
3PB1.7x3
PD2x4
aRSH 6332
bRSH 6332
(for 220)
aRSH 6327
bRSH 6327
(for 220)
PD2x4
PB2x4
(for 220)
PD 2x4
aRSH 6326
PD1.7x2.5
PB1.7x2.5
aRSH 6319K2
PB1.7x2.5 Cr3
PB1.7x3 B (for 220)
aRSH 6328
bRSH 6328
(for 220)

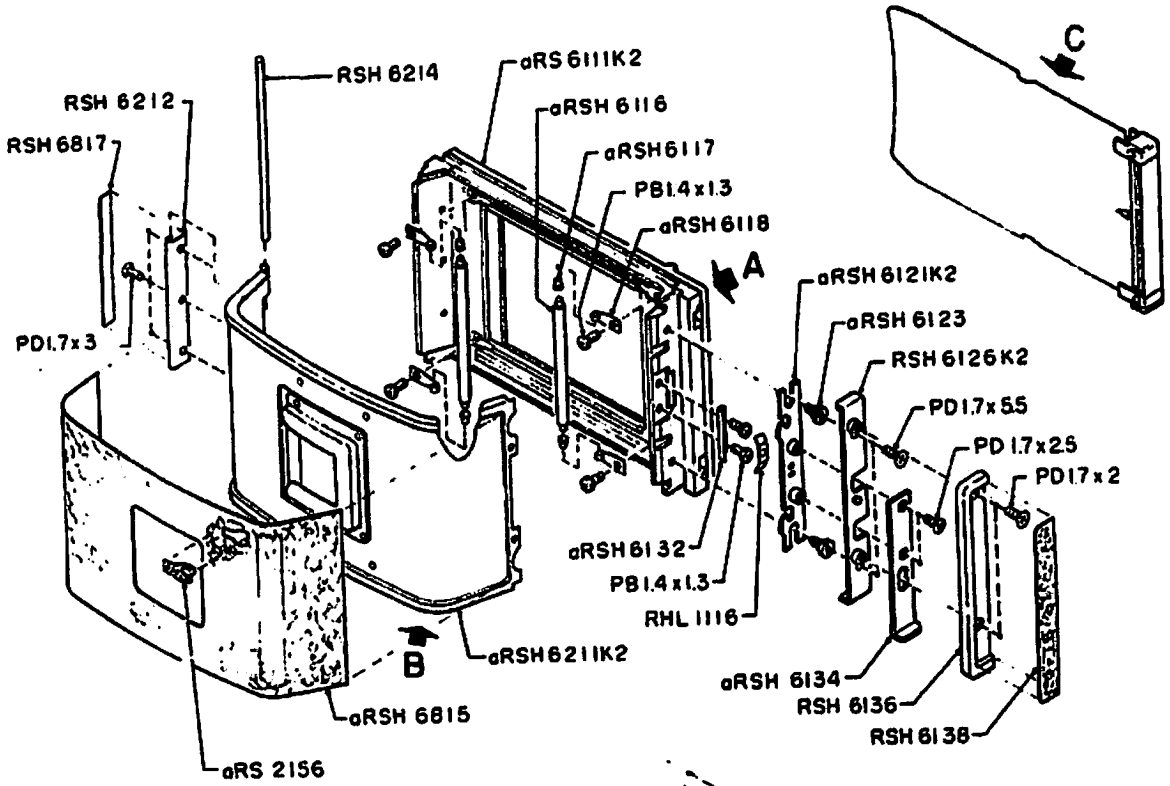

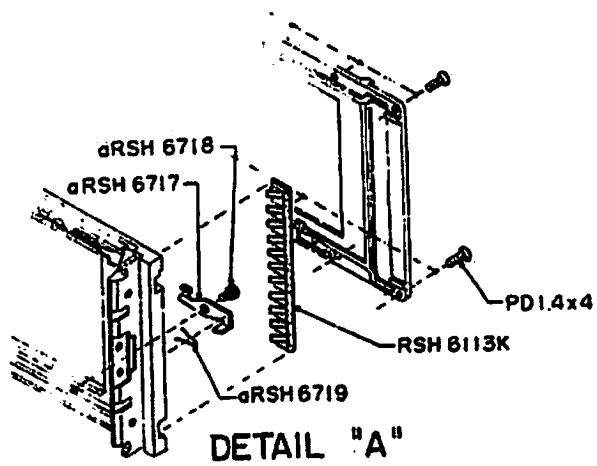

DETAIL "A"

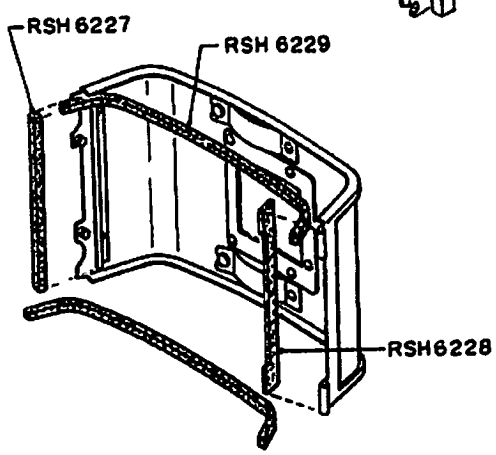

DETAIL "B"

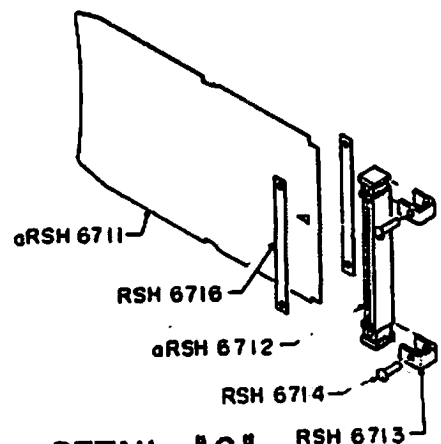

DETAIL "C"

PARTS LIST

METHOD OF REQUESTING SPARE PARTS FOR REPAIR USE

When ordering spare parts for repair purposes, mark the request in the following manner after referring to our parts lists.

Spare parts are divided as follows:

Not considered usable for repairing x
Can be supplied ..... o

Parts marked with " * " in the column of term of sale will be charged,

NOTE: When ordering spare parts, always type the complete code and numbers in the Parts No. column of the appropriate parts lists.

Mamiya RB67 ProS (aRS)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1111K	(G)	Camera body	1	13	x
aRS1115	(A)	Reflection absorber paper	1	13	0
aRS1116	(A)	Reflection absorber paper	1	13	0
aRS1117	(A)	Reflection absorber paper	1	13	0
RS1122	(B)	Light baffle frame	1	5	0
aRS1131	(B)	Rear light baffle frame	1	3	0
aRS1133	(A)	Light baffle plate, upper	1	2	0
RS1134	(F)	Light baffle plate, lower	1	2	0
RS1135	(B)	Post screw	1	2	0
RS1137	(A)	Light baffle	1	13	0
RS1138	(A)	Light baffle	1	2	0
RS1139	(A)	Light baffle	1	2	0
aRS1141K2	(C)	Frame for red bar assy.	1	8	0
RS1143	(C)	Light baffle cover	1	13	0
RS1146	(B)	Cushion	2	13	0
RS1147	(B)	Light baffle	2	8	0
RS1151	(F)	Light frame	1	13	0
RS1153	(B)	Reflection absorber paper	1	13	0
RS1156	(B)	Reflection absorber paper	1	12	0
aRS1157	(A)	Reflection absorber paper	1	13	0
aRS1158	(A)	Reflection absorber paper	1	13	0
RS1162	(B)	Reflection absorber paper	1	13	0
RS1171	(P)	Strap lug	2	1 & 2	0
RS1172	(B)	Nut	2	1 & 2	0

Revolving Adapter (aRS1200)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1211	(G)	Revolving back panel	1	15	x
aRS1212	(B)	Light baffle	1	15	0
RS1213	(F)	Catch angle - A	2	16	0
RS1214	(F)	Catch angle - B	2	16	0
RS1215	(C)	Click spring - A	2	16	0
RS1216	(C)	Click spring - B	2	16	0
RS1219	(C)	Spring plate	4	16	0
aRS1221K2	(B)	Lock lever - A	1	15	0
aRS1222K2	(B)	Lock lever - B	1	15	0
aRS1224	(A)	Shaft	2	15	0
aRS1225	(B)	Spring - A	1	15	0
aRS1226	(B)	Spring - B	1	15	0
aRS1227K2	(A)	Cover plate - A	1	15	0
aRS1228K2	(A)	Cover plate - B	1	15	0
aRS1231K2	(A)	Release lock lever - A	1	15	0
aRS1232K2	(A)	Release lock lever - B	1	15	0
aRS1235	(A)	Post screw	2	8 & 16	0
aRS1236	(A)	Spring	1	16	0
aRS1238	(A)	Bracket	1	16	0
aRS1241	(A)	Slide lock, upper	1	15	0
RS1242	(D)	Slide lock, lower	1	15	0
RS1243	(B)	Leaf spring	2	15	0
SN1006		Shoulder screw	4	15	0
RS1245	(C)	Slide lock knob	2	15	0
aRS1247	(C)	Mark plate upper	1	15	0
aRS1248	(C)	Mark plate lower	1	15	0
aRS1251	(D)	Revolving adapter panel	1	15	x
RS1252	(C)	Lock pin	3	15	0
RS1253	(G)	Stopper	1	15	0
aRS1254	(B)	Lock pin - B	1	15	0
aRS1255	(D)	Horizontal changing bar	1	15	0
aRS1256	(C)	Guide	1	15	0
aRS1257	(B)	Horizontal changing pin	1	15	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1258	(A)	Sealing strip	1	15	0
aRS1261	(D)	Release lock bar	1	15	0
RS1262	(E)	Spring	1	15	0
aRS1263	(A)	Plate	1	15	0
RS1271K2	(B)	Coupling pin assy.	1	15	0
aRS3151	(D)	Warning signal pin	1	15	0
aRS3152	(B)	Sleeve	1	15	0
RS1276	(B)	Spring	1	15	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS1311	(J)	Cocking lever	1	4	0
aRS1312K2	(N)	Cocking lever shaft	1	10	0
RS1319-1	(D)	Spring	1	10	0
RS1319-2	(A)	Ring	1	10	0
aRS1321K2	(G)	Cocking base plate	1	10	0
N2Ni3		Nut	2	10	0
RS1326	(C)	Spring	2	10	0
RS1327	(C)	Screw	2	10	0
RS1329	(E)	Button cover	1	4	0
RS1331K	(F)	Hub	1	10	0
RS1337	(A)	Anchor	1	10	0
RS1341	(B)	Arm	1	10	0
RS1342	(D)	Nut	1	10	0
RS1343	(C)	Pin	1	10	0
RS1351	(D)	Bushing	1	11	0
hwps514		Steel ball	42	4 & 11	0
RS1354	(C)	Cover ring	1	11	0
RS1356	(B)	Washer	1	11	0
RS1357K2	(G)	Cocking gear	1	11	0
RS1361	(D)	Gear	1	10	0
RS1363K	(D)	Hub	1	11	0
RS1368	(B)	Screw	1	10	0
RS1374K2	(D)	Bevel gear	1	10	0
RS1375K2	(D)	Bevel gear	1	10	0
RS1377	(C)	Screw	2	10	0
RS1379	(A)	Shoulder screw	3	10	0
RS1382	(C)	Anchor screw	1	10	0
aRS1411	(C)	Release plate	1	9	0
RS1412	(B)	Lever shaft	2	9	0
RS1413	(B)	Screw	3	9	0
RS1414	(B)	Anchor screw	1	9	0
RS1415	(B)	Spring	1	9	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1416	(B)	Release plate supporting	1	9	0
RS1421K2	(D)	Stop lever	1	9	0
RS1423	(C)	Shaft	1	9	0
RS1424	(B)	Anchor screw	1	9	0
RS1425	(B)	Spring	1	9	0
RS1431K2	(D)	Release lever	1	9	0
RS1433	(A)	Shaft	2	9	0
RS1435	(A)	Spring	1	9	0
RS1436	(A)	Anchor	1	9	0
RS1437	(A)	Anchor	1	9	0
RS1441K2	(A)	Upper release lever	1	9	0
RS1443K2	(A)	Lower release lever	1	9	0
RS1448	(C)	Spring	1	9	0
RS1451	(J)	Stop lever	1	10	0
RS1452	(E)	Hub	1	10	0
RS1453	(D)	Shoulder screw	1	10	0
RS1454	(D)	Spring	1	10	0
N2.6Ni3		Nut	1	3	0
RS1461	(G)	Release button	1	9	0
RS1462	(B)	Release lod	1	9	0
RS1463	(C)	Nut	1	9	0
RS1464	(E)	Retaining ring	1	9	0
RS1465	(F)	Locking hub	1	9	0
RS1466	(D)	Spring	1	9	0
RS1467	(D)	Spring washer	1	9	0
aRS1471	(D)	Nut	1	7	0
aRS1473	(B)	R.L bar	1	7	0
aRS1481	(E)	Setting lever	1	6	0
aRS1483	(C)	Spring	1	6	0
aRS1486	(B)	Setting ring	1	6	0
aRS1487	(B)	Stopper	1	6	0
aRS1511	(D)	Focusing knob	2	5 & 6	0
FC4662	(A)	Nut	2	5 & 6	0
aRS1513	(C)	Cover	2	5 & 6	0
aRS1521	(C)	Pinion shaft	1	5	0
RS1524	(B)	Pipe	2	5 & 6	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
SN149		Set screw	3	5	0
aRS1526	(C)	Bushing, right	1	6	0
aRS1527	(C)	Bushing, left	1	5	0
aRS1528	(B)	Set screw	3	6	0
aRS1531	(G)	Guide plate, right	1	5	0
aRS1532	(F)	Guide plate, left	1	5	0
aRS1534	(B)	Hold plate	2	5	0
aRS1541	(C)	Rack plate, right	1	5	0
aRS1542	(D)	Rack plate, left	1	5	0
RS1545	(A)	Eccentric stopper	7	4, 5 & 9	0
aRS1547	(B)	Distance scale plate	1	1	0
RS1549	(A)	Washer	0 - 2	5	0
RS1551K	(B)	Bellows	1	5	0
EFCK4614	(E)	Accessory shoe	1	2	0
EFC4628		Shoe cover	1	2	0
EFC4615	(A)	Stopper	1	2	0
aRS1565	(B)	Base	1	2	0
aRS1567	(A)	Collar	1	2	0
RS1611	(V)	Bottom cover	1	2	0
RS1612	(F)	Tripod screw	1	2	0
RS1614	(F)	Plate	1	2	0
RS1616	(C)	Tripod socket	1	2	0
RS1621	(G)	Side plate, left	1	1	0
RS1622	(H)	Side plate, right	1	2	0
aRS1631	(D)	Right panel	1	2	0
aRS1632	(C)	Decorative plate	1	2	0
aRS1633	(C)	Decorative plate	1	2	0
aRS1636-1	(A)	Sheet	1	2	0
RS1636-2	(A)	Sheet	2	2	0
aRS1641	(C)	Side plate, left	1	1	0
aRS1642	(C)	Decorative plate	1	1	0
aRS1643	(B)	Decorative plate	1	1	0
aRS1646	(B)	Distance scale	1	1	0
aRS1651K2	(A)	Slide plate, right	1	3	0
RS1652K2	(B)	Slide plate, left	1	3	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1654	(B)	Slide cover, right	1	3	0
RS1655	(E)	Slide cover, left	1	3	0
RS1661K2	(A)	Slide coupling plate	1	3	0
RS1663	(B)	Shaft	1	3	0
N2.6Ni3		Nut	1	3	0
RS1671	(B)	Lever	1	3	0
RS1672	(B)	Shoulder screw	1	3	0
RS1673	(C)	Cover plate	1	3	0
aRS1911	(B)	Leatherette	1	2	0
aRS1913	(C)	Leatherette	1	2	0
RS1914	(A)	Leatherette	1	1	0
RS1913	(B)	Leatherette	1	1	0
aRS1921-1	(B)	Leatherette	1	1	0
RS1921-2	(I)	Leatherette	1	1	0
RS1922	(G)	Leatherette	1	1	0
RS1923	(F)	Leatherette	1	1	0
aRS1924	(A)	Leatherette	2	5 & 6	0
RS1925	(F)	Leatherette	1	4	0
RS1928	(D)	Leatherette	1	1	0
RS2111	(L)	Front panel	1	5	*
RS2112	(C)	Sealing sponge	1	5	0
RS2113K2	(C)	Stopper plate	1	4	0
RS2116	(A)	Spring	1	4	0
RS2117	(B)	Anchor	1	4	0
RS2121K2	(N)	Bayonet	1	4	*
RS2123K2	(F)	Lock lever	1	4	0
RS2125	(C)	Shaft	1	4	0
RS2126	(D)	Spring	1	4	0
RS2131	(H)	Mounting ring	1	5	0
RS2133	(G)	Cocking ring	1	4	0
RS2135	(A)	Spacer	12	4	0
RS2136	(H)	Retaining plate	1	4	0
RS2137	(H)	Shoulder screw	1	4	0
RS2139	(E)	Retaining ring	1	4	0
RS2141K2	(E)	Cocking shaft	1	4	0
CSN1318		Washer	1	4	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2144	(C)	Catch plate	1	4	0
RS2151	(A)	Front cover	1	1	0
RS2153	(B)	Red bead	1	1	0
RS2155	(B)	Cover plate	1	1	0
aRS2156	(B)	Name plate	1	1	0
RS2161	(C)	Hole plate	1	2	0
RS2411	(D)	Mirror	1	6	0
aRS2412K2	(E)	Mirror holder	1	12	0
RS2413	(D)	Holder, upper	1	6	0
RS2414	(C)	Holder, lower	1	12	0
RS2416-2	(A)	Nut	1	11	0
RS2418	(B)	Paper	1	6	0
RS2421	(A)	Shaft	1	12	0
RS2422	(B)	Spring	2	12	0
RS2423	(B)	Collar	1	12	0
RS2426	(E)	Cushion	2	6	0
RS2427	(A)	Collar	1	12	0
RS2429	(A)	Cushion	1	6	0
RS2431K2	(L)	Light baffle plate	1	12	0
aRS2437	(C)	Reflection absorber paper	1	12	0
RS2441	(B)	Curtain	1	12	0
RS2442	(G)	Cushion	1	12	0
RS2443K2	(D)	Stop lever	1	12	0
RS2451K2	(I)	Mirror raising lever	1	11	0
RS2457	(C)	Spring	1	11	0
RS2461	(H)	Gear	1	11	0
RS2462	(G)	Bushing	1	11	0
RS2465	(D)	Spring	1	11	0
RS2466	(D)	Spring	1	11	0
RS2467	(B)	Anchor	2	11	0
RS2468	(C)	Screw	1	11	0
RS2471	(B)	Angle pin	2	13	0
RS2472	(A)	Screw	2	13	0
RS2475K2	(E)	Light baffle plate lever	1	11	0
RS2477	(C)	Collar	1	11	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2478	(D)	Shoulder screw	1	11	0
RS2479	(C)	Spring	1	11	0
RS2481K2	(E)	Hang lever	1	11	0
RS2483	(D)	Shaft	1	11	0
RS2484	(D)	Spring	1	11	0
RS2486	(D)	Collar	1	11	0
RS2511K2	(E)	Signal cam	1	11	0
RS2514	(C)	Shaft	1	11	0
RS2515	(B)	Screw	1	11	0
RS2516	(B)	Anchor	1	11	0
RS2517	(A)	Spring	1	11	0
RS2519	(D)	Spring	1	11	0
RS2521K2	(C)	Signal lever	1	11	0
RS2524	(B)	Collar	1	11	0
RS2527	(C)	Shaft	1	11	0
RS2528	(D)	Spring	1	11	0
RS2529	(B)	Anchor	1	11	0
RS2531	(C)	Coupling arm, right	1	11	0
aRS2532	(B)	Coupling arm, left	1	7	0
RS2533	(B)	Coupling rod	1	7	0
RS2534	(B)	Bracket	1	7	0
RS2535	(C)	Stopper	1	7	0
RS2536	(C)	Guide	2	13	0
RS2537	(B)	Catch plate	1	7	0
RS2551	(H)	Gear	2	11	0
RS2552	(E)	Hub	2	11	0
RS2554	(A)	Screw	2	11	0
RS2560	(B)	Governor	1	12	0
RS2567	(D)	Screw	3	12	0
RS2611K	(L)	Focusing screen frame	1	6	*
aRS2612	(B)	Screen glass	1	6	0
RS2613	(E)	Fresnel lens	1	6	0
RS2614	(B)	Spring plate	2	6	0
RS2615	(A)	Screw	8	6	0
RS2617	(D)	Leaf spring	2	6	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2621	(E)	Click	2	13	0
RS2623	(D)	Adjusting screw	4	8	0
RS2624	(B)	Adjusting spring	2	8	0
RS2631	(B)	F H lock pin	2	13	0
RS2634	(B)	Cushion	2	6	0
RS7149	(A)	Washer	1 - 2	6	0
aRS3118	(B)	Plate	1	8	0
aRS3122K2	(E)	Red bare changing lever	1	8	0
aRS3123	(E)	Spring	2	8 & 9	0
aRS3124	(D)	Shoulder screw	1	8	0
aRS3127	(D)	Retaining spring	2	8	0
aRS3129	(A)	Shoulder screw	1	8	0
aRS3131K2-1	(C)	Marking lever, right	1	8	0
aRS3131K2-2	(C)	Marking lever, left	1	8	0
aRS3143	(B)	Stopper	1	8	0
aRS3161	(B)	Spring	1	7	0
aRS3162	(E)	Anchor	1	8	0
aRS3164	(D)	Anchor	1	10	0
aRS3168	(B)	No. 1 lever	1	7	0
aRS3169	(D)	Shoulder screw	1	7	0
aRS3171K2	(A)	Sub lever	1	7	0
aRS3172	(D)	Spring	1	7	0
aRS3175	(C)	Spring	1	7	0
aRS3176	(B)	Coupling plate	1	7	0
aRS3177	(A)	Shaft	1	7	0
aRS3178	(B)	Nut	1	7	0
aRS3179	(B)	Spring	1	7	0
aRS3181	(A)	No. 2 lever	1	7	0
aRS3182	(D)	Shoulder screw	1	7	0
aRS3183K2	(C)	No. 3 lever	1	8	0
aRS3185	(C)	Shaft	1	8	0
aRS3186	(B)	Spring	1	8	0
aRS3187	(C)	Anchor	1	8	0
aRS3188	(A)	Setting spring	1	7	0
aRS3189-1	(A)	Stopper	1	7	0

Focusing Hood (aRS2700)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS2711	(E)	FH base frame	1	14	0
aRS2712	(C)	Spring	1	14	0
aRS2713	(A)	Plate	1	14	0
aRS2715	(D)	Stopping plate	1	14	0
aRS2717K2	(B)	Hinge plate	1	14	0
aRS2721	(A)	Shaft	1	14	0
aRS2722K	(C)	Rear panel	1	14	0
aRS2725	(B)	Light baffle plate	2	14	0
aRS2726	(A)	Hinge	2	14	0
aRS2728	(A)	Shaft	2	14	0
aRS2729	(A)	Spring	2	14	0
aRS2731	(E)	Hinge plate, right	1	14	0
aRS2732K2	(E)	Hinge plate, left	1	14	0
aRS2733	(B)	Stopper	1	14	0
aRS2738	(C)	Shaft	2	14	0
aRS2739	(B)	Shaft	2	14	0
aRS2741	(D)	Side panel, right	1	14	0
aRS2742	(D)	Side panel, left	1	14	0
aRS2743	(C)	Side panel, right	1	14	0
aRS2744	(C)	Side panel, left	1	14	0
aRS2745	(B)	Shaft	4	14	0
aRS2746	(A)	Spring	2	14	0
aRS2749	(A)	Cushion	2	14	0
aRS2751K2	(D)	Magnifier frame	1	14	0
aRS2754	(A)	Hinge plate	1	14	0
aRS2756	(B)	Shaft	1	14	0
aRS2757	(A)	Spring	2	14	0
aRS2758K	(B)	Magnifier	1	14	*
aRS2761	(C)	Hood cover	1	14	0
RS2736	(D)	Mamiya mark	1	14	0
aRS2764	(A)	Hinge plate	1	14	0
aRS2765	(A)	Plate	1	14	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS2767	(D)	Panel	1	14	0
aRS2768	(A)	Washer	2	14	0
aRS2771	(B)	Shaft	1	14	0
aRS2772	(A)	Shaft	1	14	0
aRS2774	(A)	Frame	1	14	0
aRS2775	(B)	Name plate	1	14	0
RS2733	(H)	Latch plate	1	14	0
aRS2777	(A)	Leaf spring	1	14	0
aRS2778	(B)	Guide screw	2	14	0
aRS2779	(C)	Lock plate	1	14	0
aRS2781	(A)	Sealing plate	4	14	0
aRS2782	(B)	Sealing plate	2	14	0
aRS2783	(A)	Leatherette	1	14	0
aRS2784	(B)	Leatherette	1	14	0
aRS2785	(A)	Leatherette	1	14	0
aRS2786	(B)	Cushion	2	14	0
RS2714	(A)	Velveteen	4	14	0
aRS2789	(C)	Cushion	2	14	0

Parts No.	Description	Pcs.	Ref. Page	Term of Sale
(3)PB1.7x2.2BNi	Screw for 2717K2	2	14	0
(3)PB1.7x3.5BNi	Screw for 1526, 1527, 1534	8	5, 6	0
PD1.4x2BNi	Screw for 2726	4	14	0
PD1.4x2.5BNi	Screw for 1131, 1329, 1673	7	2, 3	0
PD1.7x1.8BNi	Screw for 1534	4	5	0
PD1.7x2BNi	Screw for 1151, 1416, 1547, 1631, 1641, 2131	19	1,2,5,9,13	0
PD1.7x2.5BNi	Screw for 1621, 1622, 2151, 2161, 2552, 2713, 2715, 2764	25	1,2,11,14	0
PD1.7x3BNi	Screw 1227, 1228, 1654, 1655, 1673, 2462, 2537	16	3,7,11,15	0
PD1.7x3.5BNi	Screw for 1565, 1541, 1542	3	2,4	0
PD1.7x4BNi	Screw for 1227, 1228	2	15	0
PD1.7x4.5BNi	Screw for 1481	2	6	0
PD1.7x5.5BNi	Screw for 1513, 1565	3	2, 5, 6	0
PD2x2BNi	Screw for 1263	2	15	0
PD2x3.5BNi	Screw for 1213, 1214, 1215, 1218, 1561	9	2, 16	0
PD2x5BNi	Screw for 1171, 1312K2, 1561	14	1, 2, 4	0
PD2.6x4.5BNi	Screw for 1531, 1532, 1541, 1542	12	5	0
PD2.6x4.5Cr3	Screw for 1614, 2121	9	2, 4	0
PD2.6x6BNi	Screw for 1611	4	2	0
3PD1.7x2.5BNi	Screw for 2717K2	2	14	0
AS1.4x2	Screw for Focusing hood	8	14	0
4W2x0.2	Washer for 1661	2	3	0
5W2.5x0.2	Washer for 2511	1	12	0
6W3x0.1	Washer for 1441K2	2	9	0
E-10	E ring for 2521K2	1	11	0
E-13	E ring for 2412, 2481	3	11, 12	0
E-64	E ring for 1375K2, 1374K2	2	10	0
PB1.4x1.3BNi	Screw for 1646, 2413	4	1, 6	0
PB1.4x1.5BNi	Screw for 2414	2	12	0

Parts No.	Description	Pcs.	Ref. Page	Term of Sale
PB1.4x2BNi	Screw for Focusing hood	8	14	0
PB1.7x1.5BNi	Screw for 1551K	2	5	0
PB1.7x1.5Cr3	Screw for 2621	4	13	0
PB1.7x1.6BNi	Screw for 3131K2	2	8	0
PB1.7x1.8BNi	Screw for 1551K	5	5	0
PB1.7x2BNi	Screw for 1133, 1134, 1141K2, 1143, 1236, 1238, 1363K2, 1483, 2443K2, 2624, 2711	25	2 - 16	0
PB1.7x2.5BNi	Screw for 2534	2	7	0
PB1.7x3BNi	Screw for 1551, 2144	6	4, 5	0
PB1.7x4BNi	Screw for 1351, 1473	4	7, 11	0
PB2x3.5BNi	Screw for 1375	1	10	0
3PB1.4x1.4BNi	Screw for 1651, 1652	2	3	0
3PB1.4x1.6BNi	Screw for 1141K2	2	8	0
3PB1.7x2BNi	Screw for 1416, 3118, 2741, 3189-1, 3118	11	7, 8, 9	0
3PB1.7x2.5BNi	Screw for 1466, 2451, 2741, 2754	11	9, 11, 14	0
3PB1.7x3.5BNi	Screw for 1245, 1331K	6	10, 15	0
3PB2x2.8BNi	Screw for 1321K2	1	10	0
3PB2.6x4.5BNi	Screw for 1654, 1655	4	3	0

Breakdown List for Special Assembly

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1141K2	(C)	Frame for red bare assy.	1	8	0
├aRS1141	(C)	Frame	1	-	x
├ RS1145	(D)	Sealing sponge	1	-	0
├aRS3111	(B)	Red bare	2	-	0
├2.8W1.4x3		Washer	4	-	x
├aRS3114	(C)	Arm	1	-	x
├aRS3115	(C)	Arm	1	-	x
├aRS3116	(C)	Hub	2	-	x
├aRS3117	(C)	Shaft	2	-	x
└aRS3121	(B)	Stopper	4	-	x
aRS1221K2	(B)	Lock lever - A	1	15	0
├aRS1221	(B)	Lock lever	1	-	x
├aRS1223	(A)	Hub	1	-	x
├aRS3155	(A)	Pin	1	-	x
└aRS3156	(A)	Boss	1	-	x
aRS1222K2	(B)	Lock lever - B	1	15	0
├aRS1222	(B)	Lock lever	1	-	x
├aRS1223	(A)	Hub	1	-	x
├aRS3155	(A)	Pin	1	-	x
└aRS3156	(A)	Boss	1	-	x
aRS1227K2	(A)	Cover plate - A	1	15	0
├aRS1227	(A)	Plate	1	-	x
└aRS1233	(A)	Boss	1	-	x
aRS1228K2	(A)	Cover plate - B	1	15	0
├aRS1228	(B)	Plate	1	-	x
└aRS1233	(A)	Boss	1	-	x
aRS1231K2	(A)	Release lock lever - A	1	15	0
├aRS1231	(A)	Lever	1	-	x
├aRS3157	(C)	Pin	1	-	x
└aRS3158	(B)	Collar	1	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1232K2	(A)	Release lock lever - B	1	15	0
├ aRS1232	(A)	Lever	1	-	x
└ aRS3159	(C)	Pin	1	-	x
RS1271K2	(B)	Coupling pin assy.	1	15	0
├ RS1271	(B)	S. adapter	1	-	x
├ RS1272	(D)	Sleeve	1	-	x
├ RS1273	(A)	Rod	1	-	x
├ RS1274	(B)	Guide	1	-	x
├ RS1275	(B)	Screw	1	-	x
└ RS1276	(B)	Spring	1	-	x
aRS1312K2	(N)	Cocking lever shaft	1	10	0
├ RS1312	(N)	Shaft	1	-	x
├ RS1313	(G)	Hub	1	-	x
├ RS1318	(E)	Knok pin	2	-	x
└ aRS1316	(B)	Angle gear	1	-	x
aRS1321K2	(G)	Cocking base plate	1	10	0
├ RS1321	(G)	Base plate	1	-	x
├ RS1322	(C)	Hub	2	-	x
├ RS1323	(D)	Collar	2	-	x
├ RS1324	(E)	Pawl	2	-	x
├ RS1338	(A)	Anchor	1	-	x
└ aRS3163	(B)	Pawl	1	-	x
RS1357K2	(G)	Cocking gear	1	11	0
├ RS1357	(G)	Gear	1	-	x
└ RS1358	(D)	Pin	1	-	x
RS1374K2	(D)	Bevel gear	1	10	0
├ RS1371	(D)	Gear	1	10	0
├ RS1374	(B)	Base	1	10	0
└ E-64		E ring	1	10	0
RS1375K2	(D)	Bevel gear	1	10	0
├ RS1362K2	(F)	Bevel gear	1	10	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS1362	(S)	Shaft	1	-	x
RS1371	(D)	Gear	1	-	x
RS1368	(B)	Screw	1	-	x
RS1375	(C)	Base	1	10	0
RS1381	(C)	Spring	1	10	0
E-64		E ring	1	10	0
RS1421K2	(D)	Stop lever	1	9	0
RS1421	(D)	Lever	1	-	x
RS1422	(B)	Pin	1	-	x
RS1431K2	(D)	Release lever	1	9	0
RS1431	(D)	Lever	1	-	x
RS1432	(C)	Hub	1	-	x
RS1441K2	(A)	Upper release lever	1	9	0
RS1441	(A)	Lever	1	-	x
RS1442	(B)	Hub	1	-	x
RS1443K2	(A)	Lower release lever	1	9	0
RS1443	(A)	Lever	1	-	x
RS1444	(B)	Hub	1	-	x
aRS1651K2	(A)	Slide plate, right	1	3	0
aRS1651	(A)	Slide	1	-	x
RS1653	(B)	Pin	1	-	x
RS1652K2	(B)	Slide plate, left	1	3	0
RS1652	(B)	Slide	1	-	x
RS1653	(B)	Pin	1	-	x
RS1661K2	(A)	Slide coupling plate	1	3	0
RS1661	(A)	Plate	1	-	x
RS1662	(A)	Boss	1	-	x
RS2113K2	(C)	Stopper plate assy.	1	4	0
RS2113	(C)	Stopper plate	1	-	x
RS2115	(B)	Boss	1	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2121K2	(N)	Bayonet	1	4	*
├ RS2121	(N)	Bayonet	1	-	x
├ RS2127	(A)	Angle	1	-	x
└ PD1.4x1.8cr3		Screw	2	-	x
RS2123K2	(F)	Lock lever	1	4	0
├ RS2123	(F)	Lever	1	-	x
└ RS2124	(B)	Hub	1	-	x
RS2141K2	(E)	Cocking shaft	1	4	0
├ RS2141	(E)	Cocking gear	1	-	x
├ RS2142	(D)	Knok pin	1	-	x
└ RS2147	(D)	Shaft	1	-	x
aRS2412K2	(E)	Mirror holder	1	12	0
├ aRS2412	(E)	Holder	1	-	x
├ RS2415K	(E)	Arm	1	-	x
├ RS2417	(B)	Rivet	1	-	x
└ aRS2425	(A)	Rivet	2	-	x
RS2431K2	(L)	Light baffle plate	1	12	0
├ RS2431K	(L)	Plate	1	-	x
├ RS2433-2	(B)	Plate	1	-	x
├ RS2435	(A)	Hub	2	-	x
├ RS2436K	(E)	Arm	1	-	x
└ RS2439	(C)	Rivet	2	-	x
RS2443K2	(D)	Stop lever	1	12	0
├ RS2443	(D)	Angle	1	-	x
├ RS2444	(D)	Lever	1	-	x
├ RS2445	(C)	Screw	1	-	x
├ RS2446	(B)	Spring	1	-	x
└ 4W2x0.1		Washer	1	-	x
RS2451K2	(I)	Mirror raising lever	1	11	0
├ RS2451	(I)	Lever	1	-	x
├ RS2452	(C)	Anchor	4	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2455	(B)	Collar	1	-	x
RS2456	(C)	Shaft	1	-	x
RS2475K2	(E)	Light baffle plate lever	1	11	0
RS2475	(E)	Lever	1	-	x
RS2476	(B)	Shaft	1	-	x
RS2481K2	(E)	Hang lever	1	11	0
RS2481	(E)	Lever	1	-	x
RS2482	(D)	Hub	1	-	x
RS2487	(E)	Shaft	1	-	x
RS2511K2	(E)	Signal cam	1	11	0
RS2511	(E)	Cam	1	-	x
RS2512	(C)	Anchor	1	-	x
RS2513	(C)	Hub	1	-	x
RS2521K2	(C)	Signal lever	1	11	0
RS2521	(C)	Lever	1	-	x
RS2522	(B)	Hub	1	-	x
RS2523	(D)	Bush	1	-	x
RS2525	(C)	Shaft	1	-	x
aRS2717K2	(B)	Hinge plate	1	14	0
aRS2717	(B)	Plate	1	-	x
aRS2718	(B)	Spring holder	2	-	x
aRS2788	(B)	Pulley	2	-	x
aRS2732K2	(E)	Hinge plate, left	1	14	0
aRS2732	(E)	Plate	1	-	x
aRS2733	(E)	Stopper	1	-	x
aRS2734	(D)	Spring	1	-	x
Rml.7		Rivet	2	-	x
aRS2736-1	(C)	Lever	1	-	x
aRS2736-2	(B)	Knob	1	-	0
aRS2737	(A)	Rivet	1	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS2751K2	(D)	Magnifier Frame	1	14	0
├aRS2751	(D)	Frame	1	-	x
├aRS2752	(B)	Retaining ring	1	-	x
└ Pm-1		Rivet	4	-	x
aRS3122K2	(E)	Red bar changing lever	1	8	0
├aRS3122	(E)	1st lever	1	-	x
├aRS3125	(B)	2nd lever, right	1	-	x
├aRS3126	(D)	2nd lever, left	1	-	x
├aRS3128	(D)	Hub	1	-	x
├aRS3135	(A)	Lever	1	-	x
├aRS3136	(B)	Hub	1	-	x
└aRS3137	(B)	Hub	1	-	x
aRS3131K2	(C)	Marking lever	1	8	0
├aRS3131	(C)	3rd lever	1	-	x
├aRS3132	(C)	Pin	1	-	x
└aRS3133	(D)	Hub	1	-	x
aRS3171K2	(A)	Sub lever	1	7	0
├aRS3171	(A)	Lever	1	-	x
├aRS3173	(A)	Stop lever	1	-	x
└aRS3174	(C)	Rivet	1	-	x
aRS3183K2	(C)	No. 3 lever	1	8	0
├aRS3183	(C)	Lever	1	-	x
└aRS3128	(A)	Hub	1	-	x

120 Roll Film Holder
for Mamiya RB67 ProS (aRSH6000)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6111K2	(C)	Film holder frame	1	21	*
aRSH6116	(D)	Film roller	2	21	0
aRSH6117	(D)	Collar	4	21	0
aRSH6118	(D)	Spring	4	21	0
aRSH6121K2	(A)	Latch	1	21	0
aRSH6123	(A)	Guide	2	21	0
RSH6126K2	(D)	Latch cover	1	21	0
RHL1116	(A)	Spring	1	21	0
aRSH6132	(A)	Plate	1	21	0
aRSH6134	(A)	Lock lever	1	21	0
RSH6136	(D)	Lock lever cover	1	21	0
RSH6138	(A)	Leatherette	1	21	0
aRSH6211K2	(A)	Back lid	1	21	*
RSH6212	(B)	Hinge	1	21	0
RSH6214	(A)	Shaft	1	21	0
aRS2156	(B)	Name plate	1	21	0
RSH6227	(A)	Light baffle	1	21	0
RSH6228	(B)	Light baffle	1	21	0
aRSH6229	(D)	Sealing strip	2	21	0
aRSH6311K2	(C)	Plate holder	1	20	0
aRSH6315K2	(A)	Pressure plate	1	20	0
RSH6317	(B)	Screw	1	20	0
aRSH6319K	(B)	T-spring	2	20	0
RSH6324	(E)	Bracket	1	20	0
aRSH6326	(A)	Screw	2	20	0
aRSH6327	(B)	T-spring base	1	20	0
aRSH6328	(A)	Name plate	1	20	0
aRSH6331K2	(E)	Base plate, upper	1	20	*
aRSH6332	(C)	Base plate, lower	1	20	0
aRSH6333	(B)	Film guide	1	20	0
aRSH6334	(B)	Film guide	1	20	0
aRSH6335	(A)	Film guide	1	20	0
aRSH6336	(A)	Film guide	1	20	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6338-1	(B)	Light baffle	2	20	0
aRSH6338-2	(B)	Light baffle	2	20	0
aRSH6339-1	(A)	Guide plate	2	20	0
aRSH6339-2	(A)	Guide plate	2	20	0
aRSH6341K2	(C)	Roller	1	20	0
aRSH6344K	(C)	Counter roller	1	20	0
aRSH6345	(C)	Coller	1	20	0
aRSH6346	(B)	Shaft	1	20	0
aRSH6347K2	(B)	Roller	1	20	0
RSH6348	(B)	Shaft	1	20	0
aRSH6411K2	(C)	Base plate	1	19	0
RSH6413	(G)	Winding lever	1	17	0
RSH6414	(C)	Screw	1	17	0
RSH6415	(B)	Disk	1	17	0
aRSH6416	(A)	Shaft	1	19	0
aRSH6417	(C)	Hub	1	19	0
RSH6419K2	(D)	Disk	1	17	0
aRSH6422	(A)	Spring	1	19	0
RSH6423	(B)	Anchor	1	19	0
aRSH6424K2	(A)	Winding gear, No. 1	1	19	0
RSH6425	(D)	Screw	1	19	0
aRSH6426	(B)	Winding gear, No. 2	1	19	0
RSH6427	(A)	Disk	1	19	0
aRSH6428	(A)	Clutch gear	1	19	0
aRSH6431K2	(C)	Winding stop gear	1	19	0
aRSH6435K2	(C)	Pawl	2	19	0
RSH6438	(A)	Winding gear No. 3	1	19	0
RSH6441	(A)	Film take up spool	1	19	0
RSH6442	(A)	Spring washer	1 - 2	19	0
RSH6444	(A)	Nut	1	19	0
SN8147		Washer for 6444	0 - 2	19	0
aRSH6451K2	(C)	Release lever	1	19	0
aRSH6453	(A)	Spring	1	19	0
aRSH6461K2	(D)	Release plate	1	19	0
aRSH6463-1	(B)	Screw	1	19	0
3N2BNi		Nut	1	19	0
aRSH6464	(C)	Spring	1	19	0
aRSH6467	(C)	Spring	1	19	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6471	(B)	First gear	1	20	0
aRSH6472K2	(B)	Second gear	1	20	0
aRSH6473	(D)	Second small gear	1	20	0
aRSH6476K2		Third gear	1	20	0
aRSH6479	(A)	Screw	1	20	0
aRSH6481	(E)	Spring	1	19	0
aRSH6483	(B)	Base	1	18	0
aRSH6484K2	(C)	Counter dividing device	1	18	0
aRSH6485K2	(C)	Auxiliary dividing disc	1	18	0
RHL1521		Spring	1	18	0
aRSH6491	(E)	Film counter gear	1	18	0
aRSH6493	(D)	Exposure counter plate	1	18	0
RSH6495	(C)	Spring	1	18	0
RSH6498	(A)	Screw	1	18	0
aRSH6611K2	(A)	Film spool holder	1	17	0
aRSH6612		Collar	1	17	0
aRSH6615	(A)	Leaf spring	1	17	0
aRSH6621K2	(C)	Top cover	1	17	0
RSH6624	(E)	Cover plate	1	17	0
RSH6627	(D)	Counter window	1	17	0
aRSH6629	(A)	Mask	1	17	0
RSH6631	(D)	Bottom cover	1	17	0
RSH6634	(E)	Cover plate	1	17	0
RSH6636	(A)	Sealing strip	2	17	0
RSH6637	(F)	Discrimination plate	1	17	0
aRSH6641	(A)	Film spool holder	2	17 & 20	0
aRSH6643	(A)	Collar	1	17	0
aRSH6644	(B)	Shoulder screw	1	20	0
aRSH6645	(B)	Shoulder screw	1	17	0
aRSH6646	(B)	Spool holder	1	17	0
aRSH6647	(C)	Spring washer	1	17	0
aRSH6648	(B)	Screw	1	17	0
aRSH6711	(A)	Slide cover	1	21	0
aRSH6712	(B)	Handle bar	1	21	0
RSH6713	(S)	Fixture	2	21	0
RSH6714	(E)	Rivet	2	21	0
RSH6716	(B)	Plate	2	21	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RSH6811	(G)	Leatherette	1	17	0
RSH6812	(G)	Leatherette	1	17	0
RSH6813	(G)	Leatherette	1	17	0
RSH6814	(G)	Leatherette	1	17	0
aRSH6815	(B)	Leatherette	1	21	0
RSH6816	(D)	Leatherette	1	17	0
RSH6817	(B)	Name plate	1	21	0
aRSH7112K2	(C)	Charging lever	1	19	0
aRSH7115	(C)	Spring	1	19	0
aRSH7116	(A)	Hub	1	19	0
aRSH7119	(A)	Spring	1	18	0
aRSH7121	(B)	Lever	1	18	0
aRSH7122	(A)	Anchor screw	1	18	0
aRSH7123	(B)	Spring	1	18	0
aRSH7127	(B)	Spring	1	19	0
aRSH7129		Sponge release lever	1	19	0
aRSH7131K2	(A)	Hook	1	18	0
aRSH7134	(A)	Spring	1	18	0
aRSH7137	(B)	Signal	1	18	0
aRSH7144K2	(A)	Pawl	1	18	0
aRSH7151	(A)	Secter gear	1	18	0
aRSH7153K2	(B)	Secter gear base	1	18	0
aRSH7157	(B)	Shaft	1	18	0
aRSH7161K2	(C)	Preventive lever assy.	1	18	0
aRSH7168	(B)	Spring	1	18	0
aRSH7171	(A)	Red signal	1	18	0
RS2615	(B)	Screw	1	18	0
aRSH7173	(D)	Signal lever	1	18	0
aRSH7175	(A)	Spring	1	18	0
aRSH7176	(D)	Anchor screw	1	18	0
aRSH7177K2	(C)	Lever	1	18	0
aRSH7178	(B)	Screw	1	18	0
aRSH7179	(A)	Spring	1	18	0

Parts No.	Description	Pcs.	Ref. Page	Term of Sale
PB1.4x1.3BNi	Screw for 6118, 6132	6	21	0
3PB1.4x2BNi	Screw for 7161K2	1	18	0
3PB1.4x3.5BNi	Screw for 6491, 6493	4	18	0
3PB1.7x1.6BNi	Screw for 7131K2	1	18	0
PB1.7x1.8BNi	Screw for 7151	2	18	0
3PB1.7x2BNi	Screw for 7144K2	1	18	0
PB1.7x2.5BNi	Screw for 6331K2, 6332K2	6	20	0
3PB1.7x2.5BNi	Screw for 6411K2	1	19	0
PB1.7x2.5Cr3	Screw for 6319K	4	20	0
PB1.7x3BNi	Screw for 6421, 6621K2, 6631	7	17,19	0
3PB1.7x3BNi	Screw for 6327	2	20	0
PB1.7x4BNi	Screw for 6621K2, 6631	4	17	0
PD1.7x2BNi	Screw for 6136	2	21	0
PD1.7x2.5BNi	Screw for 6126K2, 6324, 6415, 6417, 7161K2	12	17,18,19, 20, 21	0
PD1.7x3BNi	Screw for 6212, 6411K2	4	19,21	0
3PD1.7x3BNi	Screw for 6411K2	2	19	0
PD1.7x5.5BNi	Screw for 6126K2	2	21	0
PD2x4BNi	Screw for 6333, 6334, 6335, 6336, 6348	12	20	0
6W3x0.05 - 0.1	Washer for 6441, 6461K2	0 - 3	19	0
8W4x0.2	Washer for 6451, 6472K2	0 - 2	19,20	0
5W2.5x0.1	Washer for 7144K2	0 - 1	-	0

Breakdown List for Roll Film Holder Special Assembly (aRSH)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6111K2	(C)	Film holder frame	1	21	*
-aRSH6111	(C)	Frame, upper	1	-	x
-aRSH6112	(A)	Frame, lower	1	-	x
- RSH6113K	(C)	Spring	1	-	*
- PD1.4x4BNi		Screw	11	21	*
-aRSH6717	(B)	Lock lever	1	21	*
-aRSH6718	(B)	Screw	1	21	*
-aRSH6719	(A)	Spring	1	21	*
aRSH6121K2	(A)	Latch	1	21	0
-aRSH6121	(A)	Latch	1	-	x
- RSH6122	(D)	Boss	2	-	x
RSH6126K2	(D)	Latch cover	1	21	0
- RSH6126	(D)	Cover plate	1	-	x
- RSH6125	(A)	Stud	2	-	x
aRSH6211K2	(A)	Back lid	1	21	*
-aRSH6211	(A)	Back lid	1	-	x
-aRSH6141	(B)	Collar	2	-	x
-aRSH6142	(B)	Rivet	2	-	x
- RSH6216	(B)	Spring	2	-	x
- RSH6217	(B)	Guide pin	2	-	x
- Rm1.5		Rivet	10	-	x
- RSH6221	(A)	Memo holder	1	-	x
- RSH6222	(B)	Spring	1	-	x
- RSH6223	(A)	Plate	1	-	x
- RSH6225	(B)	Flange plate	1	-	x
aRSH6311K2	(C)	Plate holder	1	20	0
-aRSH6311	(C)	Plate	1	-	x
- RSH6313	(B)	Spring	1	-	x
- Rm1.5		Rivet	2	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6315K2	(A)	Pressure plate	1	20	0
├ aRSH6315	(A)	Plate	1	-	x
└ RSH6316	(E)	Guide pin	1	-	x
aRSH6331K2	(E)	Base plate, upper	1	20	*
├ aRSH6331	(E)	Base plate	1	-	x
├ aRSH6412-1	(A)	Pole	2	-	x
├ aRSH6412-2	(A)	Pole	1	-	x
├ aRSH6437	(A)	Pole	1	-	x
├ RSH6439	(A)	Hub	1	-	x
├ aRSH6454	(A)	Pole	1	-	x
├ aRSH6457	(B)	Anchor	2	-	x
├ aRSH6461K	(D)	Release lever	1	-	x
│ ├ aRSH6461	(D)	Lever	1	-	x
│ ├ aRSH6462-1	(A)	Anchor	1	-	x
│ └ aRSH6469	(G)	Pin	1	-	x
├ aRSH6462-2	(A)	Anchor	1	-	x
├ aRSH6475K2	(E)	Lever	1	-	x
│ ├ aRSH6475	(E)	Lever	1	-	x
│ ├ aRSH6478	(B)	Shaft	1	-	x
│ └ aRSH6497	(A)	Anchor	1	-	x
├ aRSH6482	(C)	Shaft	1	-	x
├ aRSH6489-1	(D)	Bush	1	-	x
├ aRSH6642	(B)	Boss	1	-	x
├ aRSH7139	(A)	Pin	1	-	x
├ aRSH7141	(A)	Pole	1	-	x
├ aRSH7142	(C)	Pole	1	-	x
└ aRSH7149	(B)	Pin	1	-	x
aRSH6341K2	(C)	Roller	1	20	0
├ aRSH6341	(C)	Roller	1	-	x
└ aRSH6342	(D)	Plug	2	-	x
aRSH6347K2	(B)	Roller	1	20	0
├ aRSH6347	(B)	Roller	1	-	x
└ aRSH6342	(D)	Plug	2	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6411K2	(C)	Base plate	1	19	0
├aRSH6411	(C)	Base plate	1	-	x
├aRSH7125	(A)	Lever	1	-	x
├aRSH7126	(A)	Pin	1	-	x
├aRSH7128	(B)	Anchor	1	-	x
├aRSH7162	(B)	Pin	1	-	x
└aRSH7174	(B)	Pin	1	-	x
RSH6419K2	(D)	Disk	1	17	0
├ RSH6419	(D)	Disk	1	-	x
├ RSH6421-1	(B)	Pin	2	-	x
└ RSH6421-2	(A)	Pin	1	-	x
aRSH6424K2	(A)	Winding gear, No. 1	1	19	0
├aRSH6424	(A)	Gear	1	-	x
└aRSH7111	(B)	Pin	2	-	x
aRSH6431K2	(C)	Winding stop gear	1	19	0
├aRSH6431	(C)	Gear	1	-	x
├ RSH6432	(A)	Gear	1	-	x
├ RSH6433	(A)	Pin	2	-	x
└ RSH6434	(A)	Pin	2	-	x
aRSH6435K2	(D)	Pawl	2	19	0
├ RHL1428		Pawl	2	-	x
└aRSH6436	(D)	Spring	2	-	x
aRSH6451K2	(C)	Release lever	1	19	0
├aRSH6451	(C)	Stop lever	1	-	x
├aRSH6452	(C)	Hub	1	-	x
├aRSH6455	(C)	Pawl	1	-	x
├Rml.5cr		Rivet	2	-	x
└aRSH6465	(C)	Release lever	1	-	x
aRSH6461K2	(D)	Release plate	1	19	0
├aRSH6461	(D)	Plate	1	-	x
├aRSH6462-1	(A)	Pole	1	-	x
└aRSH6469	(C)	Pin	1	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6472K2	(B)	Second gear	1	20	0
├ aRSH6472	(B)	Gear	1	-	x
└ aRSH6474	(C)	Hub	1	-	x
aRSH6476K2	(A)	Third gear	1	20	0
├ RHL1457		Gear wheel	1	-	x
└ aRSH6477	(A)	Gear	1	-	x
aRSH6484K2	(C)	Counter dividing device	1	18	0
├ aRSH6484	(C)	Plate	1	-	x
└ aRSH6486	(C)	Boss	1	-	x
aRSH6485K2	(C)	Auxiliary dividing disc	1	18	0
├ aRSH6485	(C)	Plate	1	-	x
└ aRSH6487	(A)	Boss	1	-	x
aRSH6611K2	(A)	Film spool holder	1	17	0
├ aRSH6611	(A)	Plate	1	-	x
├ aRSH6613	(A)	Pole	1	-	x
└ aRSH6614	(A)	Pole	2	-	x
aRSH6621K2	(C)	Top cover	1	17	0
├ aRSH6621	(C)	Top cover	1	-	x
├ aRSH7182	(A)	Lever	1	-	x
├ aRSH7183	(B)	Plate	1	-	x
├ aRSH7184	(D)	Guide ring	1	-	x
└ aRSH7185	(C)	Click	1	-	x
aRSH7112K2	(C)	Charging lever	1	19	0
├ aRSH7112	(C)	Lever	1	-	x
├ aRSH7113	(C)	Lever	1	-	x
├ aRSH7114	(B)	Boss	1	-	x
├ aRSH7117	(B)	Connection arm	1	-	x
└ aRSH7118	(B)	Boss	1	-	x
aRSH7131K2	(A)	Hook	1	18	0
├ aRSH7131	(A)	Hook	1	-	x
└ aRSH7132	(A)	Hub	1	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH7144K2	(A)	Pawl	1	18	0
├ aRSH7144	(A)	Pawl	1	-	x
└ aRSH7145	(C)	Gear	1	-	x
aRSH7153K2	(B)	Secter gear base	1	18	0
├ aRSH7153	(B)¢	Plate	1	-	x
├ aRSH7154	(B)	Hub	1	-	x
└ aRSH7155	(A)	Pin	1	-	x
aRSH7161K2	(C)	Preventive lever assy.	1	18	0
├ aRSH7161	(C)	Lever	1	-	x
├ aRSH7166	(C)	Lever	1	-	x
├ aRSH7167	(D)	Rivet	1	-	x
├ aRSH7169	(A)	Anchor	1	-	x
├ aRSH7138K2	(D)	Hook base	1	-	x
│ ├ aRSH7138	(D)	Base	1	-	x
│ ├ aRSH7133	(B)	Hub	1	-	x
│ ├ aRSH7146	(A)	Hub	1	-	x
│ └ aRSH7156	(A)	Boss	1	-	x
└ aRSH7165	(B)	Rivet	1	-	x
aRSH7177K2	(C)	Lever	1	18	0
├ aRSH7177	(C)	Lever	1	-	x
└ aRSH7181	(B)	Pin	1	-	x

Exclusive use for 220 Roll Film Holder (bRSH)

Parts No.	Description	Pcs.	Ref. Page	Term of Sale
bRSH6311K2	Plate holder	1	20	o
bRSH6327	T-spring base	1	20	o
bRSH6328	Name plate	1	20	o
bRSH6331K2	Base plate,upper	1	20	*
bRSH6332	Base plate,lower	1	20	o
bRSH6333	Film guide	1	20	o
bRSH6334	Film guide	1	20	o
bRSH6341K2	Roller	1	20	o
bRSH6344K	Counter reller	1	20	o
bRSH6345	Coller	1	20	o
bRSH6471	First gear	1	20	o
bRSH6472K2	Second gear	1	20	o
bRSH6611K2	Film spool holder	1	17	o
bRSH6615	Leaf spring	1	17	o
bRSH6915K2	Pressure plate	1	20	o
bRSH6973	Second small gear	1	20	o
bRSH6976K2	Third gear	1	20	o
bRSH6984K2	Counter dividing device	1	18	o
bRSH6985K2	Auxiliary dividing disc	1	18	o
bRSH6991	Film counter gear	1	18	o
bRSH6993	Expasure counter plate	1	18	o
bRSH6937	Discrimination plate	1	17	o
PCP569	Washer	2	19	o